Installation and service instructions



VIESMANN

Vitodens 200-W Type B2HA, 49 and 60 kW Wall mounted gas condensing boiler Natural gas and LPG version



VITODENS 200-W



5817254 GB 7/2020 Please keep safe.

Safety instructions



Please follow these safety instructions closely to prevent accidents and material losses.

Safety instructions explained



Danger

This symbol warns against the risk of injury.

Please note

This symbol warns against the risk of material losses and environmental pollution.

Note

Details identified by the word "Note" contain additional information.

Target group

These instructions are exclusively intended for qualified contractors.

- Work on gas installations may only be carried out by a registered gas fitter.
- Work on electrical equipment may only be carried out by a qualified electrician.
- The system must be commissioned by the system installer or a qualified person authorised by the installer.

Regulations to be observed

- National installation regulations
- Statutory regulations for the prevention of accidents
- Statutory regulations for environmental protection
- Codes of practice of the relevant trade associations
- Relevant country-specific safety regulations

Safety instructions for working on the system

Working on the system

- Where gas is used as the fuel, close the main gas shut-off valve and safeguard it against unintentional reopening.
- Isolate the system from the power supply, e.g. by removing the separate fuse or by means of a mains isolator, and check that it is no longer live.
- Safeguard the system against reconnection.
- Wear suitable personal protective equipment when carrying out any work.

Safety instructions (cont.)



Danger

Hot surfaces and fluids can lead to burns or scalding.

- Before maintenance and service work, switch OFF the appliance and let it cool down.
- Never touch hot surfaces on the boiler, burner, flue system or pipework.

Please note

Electronic assemblies can be damaged by electrostatic discharge. Prior to commencing work, touch earthed objects such as heating or water pipes to discharge static loads.

Repair work

Please note

Repairing components that fulfil a safety function can compromise the safe operation of the system.
Replace faulty components only with genuine Viessmann spare parts.

Auxiliary components, spare and wearing parts

Please note

Spare and wearing parts that have not been tested together with the system can compromise its function. Installing non-authorised components and making non-approved modifications or conversions can compromise safety and may invalidate our warranty.

For replacements, use only original spare parts supplied or approved by Viessmann.

Safety instructions (cont.)

Safety instructions for operating the system

If you smell gas



Danger

Escaping gas can lead to explosions which may result in serious injury.

- Do not smoke. Prevent naked flames and sparks. Never switch lights or electrical appliances on or off.
- Close the gas shut-off valve.
- Open windows and doors.
- Evacuate any people from the danger zone.
- Notify your gas or electricity supply utility from outside the building.
- Have the power supply to the building shut off from a safe place (outside the building).

If you smell flue gas



Danger

Flue gas can lead to life threatening poisoning.

- Shut down the heating system.
- Ventilate the installation site.
- Close doors to living spaces to prevent flue gases from spreading.

What to do if water escapes from the appliance



Danger

If water escapes from the appliance there is a risk of electrocution. Switch OFF the heating system at the external isolator (e.g. fuse box, domestic distribution board).



Danger

If water escapes from the appliance there is a risk of scalding.

Never touch hot heating water.

Condensate



Danger

Contact with condensate can be harmful to health.

Never let condensate touch your skin or eyes and do not swallow it.

Flue systems and combustion air

Ensure that flue systems are clear and cannot be sealed, for instance due to accumulation of condensate or other external causes.

Ensure an adequate supply of combustion air.

Inform system users that subsequent modifications to the building characteristics are not permissible (e.g. cable/pipework routing, cladding or partitions).



Danger

Leaking or blocked flue systems, or an inadequate supply of combustion air can cause life threatening poisoning from carbon monoxide in the flue gas.

Ensure the flue system is in good working order. Vents for supplying combustion air must be non-sealable.

Extractors

Operating appliances that exhaust air to the outside (extractor hoods, extractors, air conditioning units, etc.) can create negative pressure. If the boiler is operated at the same time, this can lead to a reverse flow of flue gas.

Safety instructions (cont.)



Danger

The simultaneous operation of the boiler and appliances that exhausts air to the outside can result in life threatening poisoning due to a reverse flow of flue gas. Fit an interlock circuit or take suitable steps to ensure an adequate supply of combustion air.

Index

1.	Information	Disposal of packaging	
		Symbols	
		Intended use	8
		Product information	
		■ Vitodens 200-W, type B2HA	9
		System examples	9
		Spare parts lists	9
2.	Preparing for installation		10
3.	Installation sequence	Mounting the boiler and making connections	12
	•	■ Fitting the wall mounting bracket	12
		Hooking the boiler onto the wall mounting bracket and aligning it	
		Connection on the heating water side	
		■ Connection set with integral low loss header	
		Flue gas connection	
		Condensate connection	
		Gas connection	
		Opening the control unit enclosure	
		Electrical connections	
		■ Circulation pump at plug [20]	
		■ Circulation pump at plug [21]	
		External demand via switching contact	
		■ External demand via 3 whening contact	
		External demand via 0 = 10 v input External blocking via switching contact	
		Outside temperature sensor 1	
		■ Power supply for accessories at plug 96 (230 V ~)	
		Power supply 40 Power supply 4	
		■ Routing connecting cables	
		Closing the control unit enclosure and inserting the programming unit .	
4.	Commissioning, inspection, maintenance	Steps - commissioning, inspection and maintenance	26
	tion, maintenance		
		Calling up coding level 1	48
	tion, maintenance	Calling up coding level 1	48 48
	tion, maintenance	Calling up coding level 1	48 48 50
	tion, maintenance	Calling up coding level 1 General/group "1" Boiler/group "2" DHW/group "3"	48 48 50 51
	tion, maintenance	Calling up coding level 1	48 48 50 51
5.	tion, maintenance Code 1	Calling up coding level 1 General/group "1" Boiler/group "2" DHW/group "3" Solar/group "4" Heating circuit 1, heating circuit 2, heating circuit 3/group "5"	48 48 50 51 51 52
5.	tion, maintenance	Calling up coding level 1 General/group "1" Boiler/group "2" DHW/group "3" Solar/group "4" Heating circuit 1, heating circuit 2, heating circuit 3/group "5" Calling up coding level 2	48 48 50 51 51 52
5.	tion, maintenance Code 1	Calling up coding level 1 General/group "1" Boiler/group "2" DHW/group "3" Solar/group "4" Heating circuit 1, heating circuit 2, heating circuit 3/group "5" Calling up coding level 2 General/group "1"	48 48 50 51 51 52 57
5.	tion, maintenance Code 1	Calling up coding level 1 General/group "1" Boiler/group "2" DHW/group "3" Solar/group "4" Heating circuit 1, heating circuit 2, heating circuit 3/group "5" Calling up coding level 2 General/group "1" Boiler/group "2"	48 48 50 51 51 52 57 57 63
5.	tion, maintenance Code 1	Calling up coding level 1 General/group "1" Boiler/group "2" DHW/group "3" Solar/group "4" Heating circuit 1, heating circuit 2, heating circuit 3/group "5" Calling up coding level 2 General/group "1" Boiler/group "2" DHW/group "3"	48 48 50 51 51 52 57 57 63 64
5.	tion, maintenance Code 1	Calling up coding level 1 General/group "1" Boiler/group "2" DHW/group "3" Solar/group "4" Heating circuit 1, heating circuit 2, heating circuit 3/group "5" Calling up coding level 2 General/group "1" Boiler/group "2"	48 48 50 51 51 52 57 57 63 64 65
 6. 	tion, maintenance Code 1 Code 2	Calling up coding level 1 General/group "1" Boiler/group "2" DHW/group "3" Solar/group "4" Heating circuit 1, heating circuit 2, heating circuit 3/group "5" Calling up coding level 2 General/group "1" Boiler/group "2" DHW/group "3" Solar/group "4" Heating circuit 1, heating circuit 2, heating circuit 3/group "5"	48 48 50 51 51 52 57 63 64 65 68
5.	tion, maintenance Code 1	Calling up coding level 1 General/group "1" Boiler/group "2" DHW/group "3" Solar/group "4" Heating circuit 1, heating circuit 2, heating circuit 3/group "5" Calling up coding level 2 General/group "1" Boiler/group "2" DHW/group "3" Solar/group "4" Heating circuit 1, heating circuit 2, heating circuit 3/group "5" Service level	48 48 50 51 51 52 57 57 63 64 65 68 74
 6. 	tion, maintenance Code 1 Code 2 Diagnosis and service	Calling up coding level 1 General/group "1" Boiler/group "2" DHW/group "3" Solar/group "4" Heating circuit 1, heating circuit 2, heating circuit 3/group "5" Calling up coding level 2 General/group "1" Boiler/group "2" DHW/group "3" Solar/group "4" Heating circuit 1, heating circuit 2, heating circuit 3/group "5" Service level Weather-compensated control unit	48 48 50 51 51 52 57 63 64 65 68 74 74
 6. 	tion, maintenance Code 1 Code 2 Diagnosis and service	Calling up coding level 1 General/group "1" Boiler/group "2" DHW/group "3" Solar/group "4" Heating circuit 1, heating circuit 2, heating circuit 3/group "5" Calling up coding level 2 General/group "1" Boiler/group "2" DHW/group "3" Solar/group "4" Heating circuit 1, heating circuit 2, heating circuit 3/group "5" Service level Weather-compensated control unit Constant temperature control unit	48 48 50 51 51 52 57 63 64 65 68 74 74
 6. 	tion, maintenance Code 1 Code 2 Diagnosis and service	Calling up coding level 1 General/group "1" Boiler/group "2" DHW/group "3" Solar/group "4" Heating circuit 1, heating circuit 2, heating circuit 3/group "5" Calling up coding level 2 General/group "1" Boiler/group "2" DHW/group "3" Solar/group "4" Heating circuit 1, heating circuit 2, heating circuit 3/group "5" Service level Weather-compensated control unit Constant temperature control unit Diagnosis	48 48 50 51 51 52 57 63 64 65 68 74 74 75
 6. 	tion, maintenance Code 1 Code 2 Diagnosis and service	Calling up coding level 1 General/group "1" Boiler/group "2" DHW/group "3" Solar/group "4" Heating circuit 1, heating circuit 2, heating circuit 3/group "5" Calling up coding level 2 General/group "1" Boiler/group "2" DHW/group "3" Solar/group "4" Heating circuit 1, heating circuit 2, heating circuit 3/group "5" Service level Weather-compensated control unit Constant temperature control unit Diagnosis Operating data	48 48 50 51 51 52 57 63 64 65 68 74 74 75 75
 6. 	tion, maintenance Code 1 Code 2 Diagnosis and service	Calling up coding level 1 General/group "1" Boiler/group "2" DHW/group "3" Solar/group "4" Heating circuit 1, heating circuit 2, heating circuit 3/group "5" Calling up coding level 2 General/group "1" Boiler/group "2" DHW/group "3" Solar/group "4" Heating circuit 1, heating circuit 2, heating circuit 3/group "5" Service level Weather-compensated control unit Constant temperature control unit Diagnosis Operating data Brief scan	48 48 50 51 51 52 57 63 64 65 68 74 74 75 75
 6. 	tion, maintenance Code 1 Code 2 Diagnosis and service	Calling up coding level 1 General/group "1" Boiler/group "2" DHW/group "3" Solar/group "4" Heating circuit 1, heating circuit 2, heating circuit 3/group "5" Calling up coding level 2 General/group "1" Boiler/group "2" DHW/group "3" Solar/group "4" Heating circuit 1, heating circuit 2, heating circuit 3/group "5" Service level Weather-compensated control unit Constant temperature control unit Diagnosis Operating data Brief scan Checking outputs (relay test)	48 48 50 51 51 52 57 57 63 64 65 68 74 74 75 75 75 78
 6. 	tion, maintenance Code 1 Code 2 Diagnosis and service	Calling up coding level 1 General/group "1" Boiler/group "2" DHW/group "3" Solar/group "4" Heating circuit 1, heating circuit 2, heating circuit 3/group "5" Calling up coding level 2 General/group "1" Boiler/group "2" DHW/group "3" Solar/group "4" Heating circuit 1, heating circuit 2, heating circuit 3/group "5" Service level Weather-compensated control unit Constant temperature control unit Diagnosis Operating data Brief scan	48 48 50 51 51 52 57 57 63 64 65 68 74 74 75 75 78 78
5.6.	tion, maintenance Code 1 Code 2 Diagnosis and service scans	Calling up coding level 1 General/group "1" Boiler/group "2" DHW/group "3" Solar/group "4" Heating circuit 1, heating circuit 2, heating circuit 3/group "5" Calling up coding level 2 General/group "1" Boiler/group "2" DHW/group "3" Solar/group "4" Heating circuit 1, heating circuit 2, heating circuit 3/group "5" Service level Weather-compensated control unit Constant temperature control unit Diagnosis Operating data Brief scan Checking outputs (relay test) Weather-compensated control unit Constant temperature control unit	48 48 50 51 51 52 57 63 64 65 68 74 74 75 75 75 78 78
5.6.	tion, maintenance Code 1 Code 2 Diagnosis and service	Calling up coding level 1 General/group "1" Boiler/group "2" DHW/group "3" Solar/group "4" Heating circuit 1, heating circuit 2, heating circuit 3/group "5" Calling up coding level 2 General/group "1" Boiler/group "2" DHW/group "3" Solar/group "4" Heating circuit 1, heating circuit 2, heating circuit 3/group "5" Service level Weather-compensated control unit Constant temperature control unit Diagnosis Operating data Brief scan Checking outputs (relay test) Weather-compensated control unit	48 48 50 51 51 52 57 63 64 65 68 74 74 75 75 75 78 78 78

Index (cont.)

		Constant temperature control unit	80
		Fault codes	
		Maintenance	90
		 Checking the outside temperature sensor (weather-compensated control units) 	90
		 Checking the boiler water temperature sensors, cylinder tempera- 	00
		ture sensor or flow temperature sensor for the low loss header	91
		■ Checking the flue gas temperature sensor	
		■ Checking the fuse	
		■ Mixer extension kit	
		■ Checking the Vitotronic 200-H (accessories)	
		■ Replacing the power cable	
9.	Function description	Constant temperature control unit	95
	·	■ Heating mode	
		■ DHW heating	
		Weather-compensated control unit	
		■ Heating mode	
		■ DHW heating	
		■ Boosting DHW heating	
		Internal extensions (accessories)	
		■ Internal H1 extension	
		■ Internal H2 extension	
		External extensions (accessories)	
		■ AM1 extension	
		■ EA1 extension	
		Control functions	
		External operating program changeover	
		■ External blocking	
		■ External demand	
		Venting program	
		Screed drying	
		Raising the reduced room temperature	
		Reducing the heat-up time	
		Assigning heating circuits to the remote control	
		Electronic combustion control unit	
10.	Connection and wiring dia-	Internal connections	107
	gram	External connections	
11.	Commissioning/service reports	Report	109
12.	Specification		110
13.	Disposal	Final decommissioning and disposal	112
1.4	Certificates	Declaration of conformity	110
14.	Oci illicates	Manufacturer's declaration	
		Manufacturer's declaration Manufacturer's certificate according to the 1st BlmSchV [Germany]	
15.	Keyword index		114

Disposal of packaging

Please dispose of packaging waste in line with statutory regulations.

Symbols

Symbol	Meaning
	Reference to other document containing further information
1.	Step in a diagram: The numbers correspond to the order in which the steps are carried out.
!	Warning of material losses and environ- mental pollution
4	Live electrical area
③	Pay particular attention.
) %	 Component must audibly click into place. or Acoustic signal
*	 Fit new component. or In conjunction with a tool: Clean the surface.
	Dispose of component correctly.
X	Dispose of component at a suitable collection point. Do not dispose of component in domestic waste.

The steps in connection with commissioning, inspection and maintenance are found in the "Commissioning, inspection and maintenance" section and identified as follows:

Symbol	Meaning
O	Steps required during commissioning
Q ⁰	Not required during commissioning
©	Steps required during inspection
	Not required during inspection
عر	Steps required during maintenance
عم	Not required during maintenance

Intended use

The appliance is intended solely for installation and operation in sealed unvented heating systems that comply with EN 12828, with due attention paid to the associated installation, service and operating instructions. It is only designed for heating up heating water that is of potable water quality.

Intended use presupposes that a fixed installation in conjunction with permissible, system-specific components has been carried out.

Commercial or industrial usage for a purpose other than heating the building or DHW shall be deemed inappropriate.

Any usage beyond this must be approved by the manufacturer in each individual case.

Intended use (cont.)

Incorrect usage or operation of the appliance (e.g. the appliance being opened by the system user) is prohibited and will result in an exclusion of liability. Incorrect usage also occurs if the components in the heating system are modified from their intended use (e.g. if the flue gas and ventilation air paths are sealed).

Product information

Vitodens 200-W, type B2HA

The selected gas category in the delivered condition and the associated nominal gas pressure are given on the boiler type plate. The type plate also shows the other gas types and pressures with which the boiler can be operated. A conversion within the stated natural gas groups is not required. For conversion to LPG (without conversion kit), see "Commissioning, inspection and maintenance".

The **Vitodens 200-W** may only be delivered to countries listed on the type plate. For deliveries to other countries, approved contractors must arrange individual approval on their own initiative and in accordance with the law of the country in question.

Multi boiler system

For the installation of a multi boiler system, observe the installation instructions for the multi boiler system accessories.

System examples

System examples with hydraulic and electrical connection diagrams and function descriptions are available to help setting up the heating system.

Detailed information on system examples can be found at: www.viessmann-schemes.com

Spare parts lists

Information about spare parts can be found at **www.viessmann.com/etapp** or in the Viessmann spare part app.







Preparing for installation

Please note

To prevent appliance damage, connect all pipework free of load and torque stress

Vitodens 200-W with connection set with integral low loss header

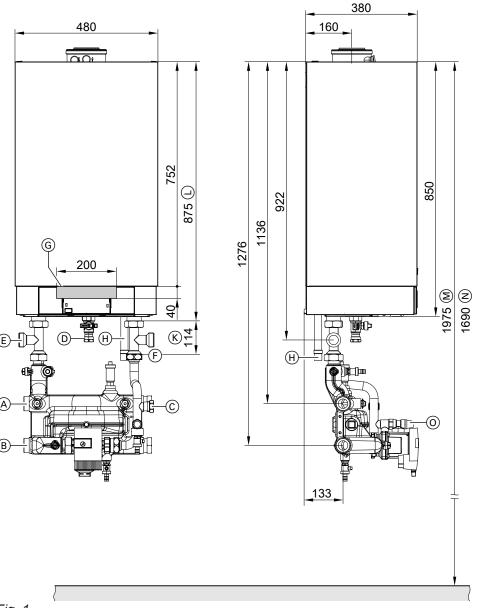


Fig. 1

- A Heating flow G 11/2
- (B) Heating return G 11/2
- © Expansion vessel G 1
- D Gas connection R ¾
- E Cylinder flow G 11/2
- F Cylinder return G 11/2
- © Cable entry area at the back

- (H) Condensate drain
- K If DHW cylinder connection set (accessories) is being used
- (L) Without connection sets (accessories)
- M Recommended dimension (single boiler system)
- N Recommended dimension (multi boiler system)
- Safety valve

Preparing for installation (cont.)

Note

This boiler (IP rating: IP X4) is approved for installation in wet rooms inside safety zone 1 in accordance with DIN VDE 0100, providing the occurrence of water jets can be ruled out.

Observe the requirements of DIN VDE 0100.

- **1.** Prepare the water connections. Thoroughly flush the heating system.
- **2.** Prepare the gas connection according to TRGI or TRF [or local regulations].

- 3. Prepare the electrical connections.
 - The appliance is delivered fitted with a power cable (approx. 2 m long).

Note

Connect the power cable to the electricity supply using a fixed connection.

- Power supply: 230 V, 50 Hz, fuse rating max. 16 A
- Accessory cables: 0.75 mm² flexible PVC cable with required number of cores for external connections.

Mounting the boiler and making connections

Fitting the wall mounting bracket

Note

The enclosed screws and rawl plugs are only suitable for concrete. For other construction materials, use fixing materials that are suitable for 100 kg loads.

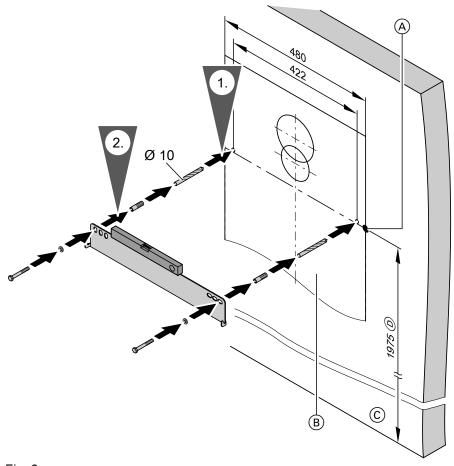


Fig. 2

- A Reference point, boiler top edge
- (B) Installation template (included with the boiler)
- © Top edge, finished floor
- © Recommendation

Mounting the boiler and making connections (cont.)

Hooking the boiler onto the wall mounting bracket and aligning it

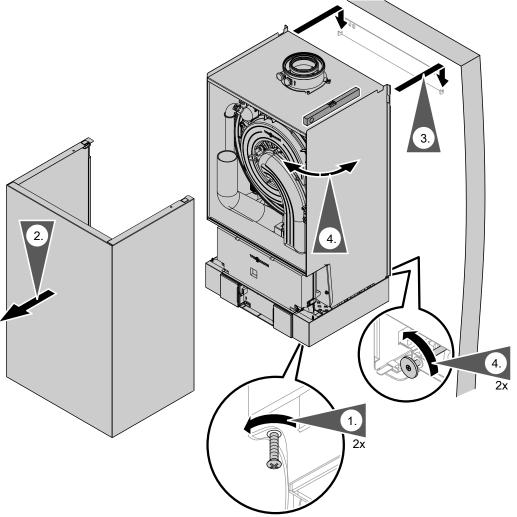


Fig. 3

Note on step 4

With a spirit level, align the boiler vertically using the adjusting screws.

Connection on the heating water side


Note

Connection situation shown with the connection sets that are available as accessories.

Provide the required connections when using on-site fittings.

Connection on the heating water side (cont.)

Connection set with integral low loss header

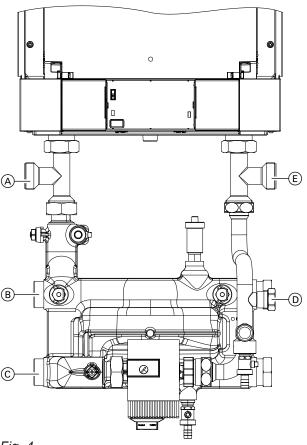

Connect the boiler to the on-site pipework.

Fig. 4

- A Cylinder flow
- (B) Heating flow
- © Heating return
- D Expansion vessel
- (E) Cylinder return

Flue gas connection

Note

Only use the "System certificate" and "Skoberne GmbH flue system" labels in conjunction with the Viessmann flue system made by Skoberne.

Do not carry out **commissioning** until the following conditions are met:

- Free passage through the flue gas pipes.
- Flue system with positive pressure is gas-tight.
- Inspection port covers checked for secure and tight seating.
- Apertures for ensuring sufficient combustion air supply are open and cannot be closed off.
- Applicable regulations on installing and commissioning flue systems have been followed.

Connect the balanced flue pipe.



Flue system installation instructions



Danger

Leaking or blocked flue systems or an insufficient supply of combustion air cause life threatening poisoning due to carbon monoxide in the flue gas.

Ensure the flue system functions correctly. Apertures for combustion air supply must not be able to be closed off.

Prevent condensate drainage via a wind protector.

Condensate connection

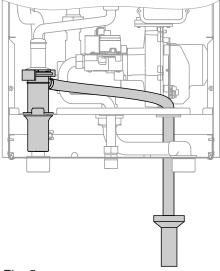



Fig. 5

- 1. Pull the condensate hose far enough out so that no unnecessary bends are created inside the boiler. Check the tightness of the trap connection.
- Connect the condensate hose with a constant fall and a pipe vent to the drain network or to a neutralising system.

Note

Observe local waste water regulations.

Gas connection

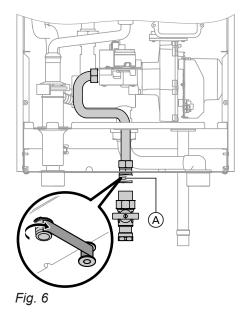

Information on operation with LPG

When installing the boiler in rooms below ground level we recommend fitting an external safety solenoid valve.

1. Seal gas shut-off valve (A) into the gas connection.

2. Check the gas connection for leaks.

Note

Only use suitable and approved leak detection agents (EN 14291) and devices for the leak test. Leak detection agents with unsuitable constituents (e.g. nitrides, sulphides) can cause material damage.

Remove residues of the leak detection agent after testing.

Please note

- Excessive test pressure will damage the boiler and the gas train.

 Max. test pressure 150 mbar (15 kPa).

 Where higher pressure is required for leak tests, disconnect the boiler and the gas train from the main supply pipe (undo the fitting).
- 3. Purge the gas line.



Conversion to alternative gas types:

See "Commissioning, inspection and maintenance".


Opening the control unit enclosure

Please note

Electronic assemblies can be damaged by electrostatic discharge.

Prior to commencing any work, touch earthed objects such as heating or water pipes to discharge static loads.

Opening the control unit enclosure (cont.)

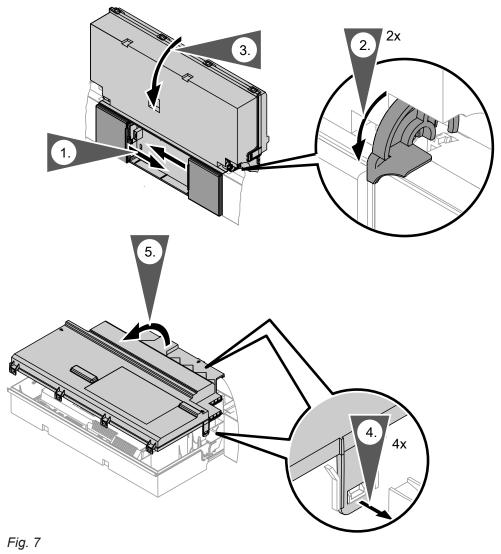

Electrical connections

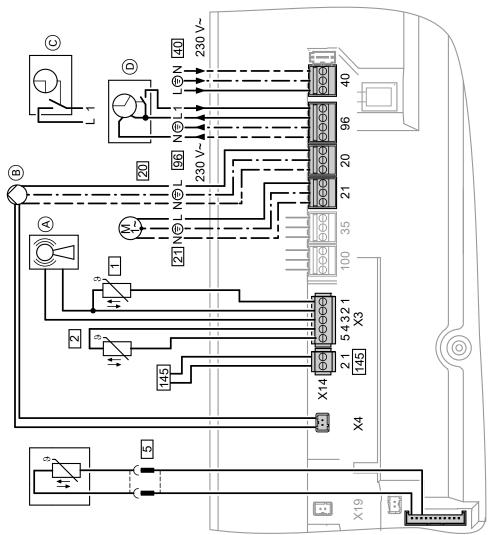


Fig. 8

- A Radio clock receiver
- B Heating circuit pump or boiler circuit pump

Connections to 230 V~ plugs

- 20 Boiler circuit pump or heating circuit pump
 - Variable speed with 0 10 V connection
- [21] Circulation pump, connection options:
 - DHW circulation pump
 - External heating circuit pump
 - Circulation pump for cylinder heating
- 40 Power supply
- 96 Power supply for accessories
 - External demand/blocking
 - Vitotrol 100 UTA
 - Vitotrol 100 UTDB
 - Vitotrol 100, type UTDB-RF

- © Vitotrol 100, type UTDB (only for constant temperature control units)
 - When making this connection, remove jumper between "1" and "L".
- Vitotrol 100, type UTA (only for constant temperature control units)

Vitotrol 100 wireless receiver, type UTDB-RF When making this connection, remove jumper between "1" and "L".

Connections to LV plugs

- 1 Outside temperature sensor
- Flow temperature sensor for low loss header (accessories)

Cylinder temperature sensor (supplied with DHW cylinder connection set)




- Vitotrol 200-A or 300-A remote control
- Vitocom 100 GSM
- Mixer extension kit
- Solar control module, type SM1
- Vitosolic
- AM1 extension
- EA1 extension
- Wireless base station



Information on connecting accessories

When connecting accessories observe the separate installation instructions provided with them.

Circulation pump at plug 20

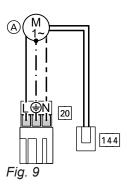

Insert plug 144 (0 - 10 V connection) at X4.

Rated current 2(1) $A\sim$ Rated voltage 230 $V\sim$

(A) High-efficiency circulation pump, speed-controlled via 0 - 10 V control voltage

Adjusting the function of the circulation pump

Hydraulic connection/connection requirements	Control unit setting Coding address/group	Circulation pump setting
Single boiler system with: Heating circuit without mixer Connection without low loss header and without heating water buffer cylinder	 Max. pump speed: E6: /heating circuit Min. pump speed: E7: /heating circuit For further details, see the following diagram and chapter "Heating circuit" under code 2. 	Ext. In
Single boiler system Connection of the heating circuits to the heating water buffer cylinder	30:0/boiler/2	Recommended for $\Delta t = 15 \text{ K}$ • 49 kW: = 2 \(\frac{1}{2} = 3 \) • 60 kW: = 3 \(\frac{1}{2} = 3 \) • 3.44 m ³ /h

Hydraulic connection/connection requirements	Control unit setting Coding address/group	Circulation pump setting
Single boiler system Connection of the heating circuits to connection set with integral low loss header	30:0/boiler/2	Ext. In 2 12 12
		Recommended for Δt = 15 K ■ 49 kW: = 3 \(\equiv \) 2.87 m ³ /h ■ 60 kW: = 4 \(\equiv \) 3.37 m ³ /h
Multi boiler system	30:0/boiler/2	Ext. In 2 12 12
		Recommended for Δt = 15 K ■ 49 kW: = 2 \(\equiv \) 2.80 m ³ /h ■ 60 kW: = 3 \(\equiv \) 3.44 m ³ /h
Multi stage circulation pump (on site)	30:0/boiler/2	

Circulation pump VI Para 25/1-11

Rated voltage	V~	230
Power consumption		
■ Max.	W	140
■ Min.	W	8

Residual head of circulation pump (coding address E6 and E7)

When connecting a heating circuit without mixer and without low loss header or heating water buffer cylinder, the circulation pump is controlled subject to the outside temperature. The min. and max. speeds of the circulation pump are limited by the settings for coding addresses E6 and E7.

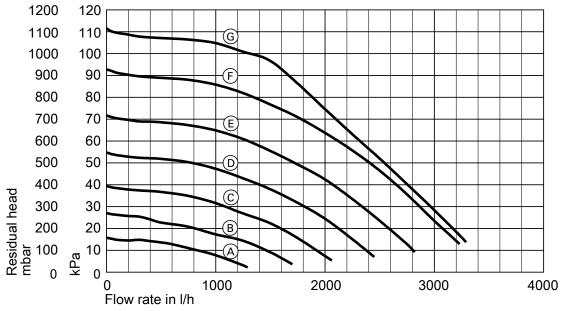


Fig. 10

Setting for coding addresses E6, E7

Curve	Coding address value	Pump rate, circula- tion pump	
A	40	40 %	
B	50	50 %	
C	60	60 %	
D	70	70 %	
E	80	80 %	
F	90	90 %	
G	100	100 %	

Circulation pump at plug 21



A Circulation pump

Note

Connect DHW circulation pumps with standalone functions directly to the 230 V \sim supply.

Rated current 2(1) A \sim Rated voltage 230 V \sim

Set function of connected component in coding address "39"

Function	Code
DHW circulation pump	39:0
Heating circuit pump for heating circuit without mixer A1	39:1
Circulation pump for cylinder heating (delivered condition)	39:2

External demand via switching contact

Connection options:


- EA1 extension (accessory, see separate installation instructions)
- Plug 96

When the contact is closed, burner operation is load-dependent. The boiler water is heated to the set value selected in parameter/coding address "9b" in the "General"/1 group. The boiler water temperature is limited by this set value and by the electronic maximum limit (coding address "06" in the "Boiler"/2 group).

Please note

Live contacts lead to short circuits or phase failure.

The external connection **must be floating** and meet the requirements of protection class II.

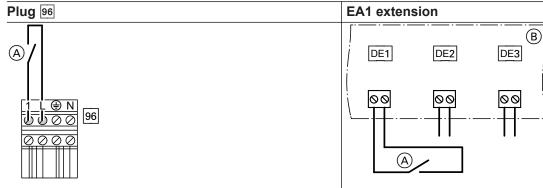

- A Floating contact (when connecting, remove jumper between L and 1)
- A Floating contact
- **B** EA1 extension

Parameters/codes


- "4b:1" in the "General"/1 group
- Effect of the function on the relevant heating circuit pump:
 - Parameter/coding address "d7" in the **"Heating circuit"** group (only for weather-compensated control units)
- Effect of the function on the circulation pump for cylinder heating:
- Parameter/coding address "5F" in the **"DHW"/3** group

Parameters/codes

- Set "3A" (DE1), "3b" (DE2) or "3C" (DE3) to 2 in the "General"/1 group
- Effect of the function on the relevant heating circuit pump:
 - Parameter/coding address "d7" in the **"Heating circuit"** group (only for weather-compensated control units)
- Effect of the function on the circulation pump for cylinder heating:
- Parameter/coding address "5F" in the **"DHW"/3** group

External demand via 0 – 10 V input

Connection at 0 - 10 V input at **EA1 extension**. Ensure DC separation between the earth conductor and the negative pole of the on-site power source.

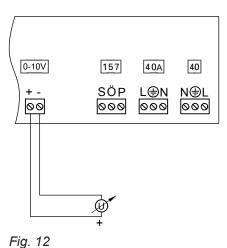

	No specification for set boiler water temperature	
1 V	Set value 10 °C	
10 V	Set value 100 °C	

External blocking via switching contact

Connection options:

 
- Plug 96
- EA1 extension (accessory, see separate installation instructions)

When the contact is closed, the burner is switched off. The heating circuit pump and (if installed) the circulation pump for cylinder heating are switched according to the set parameter/code (see the following table "Parameters/codes").

Please note

Live contacts lead to short circuits or phase fail-

The external connection **must be floating** and meet the requirements of protection class II.



 Floating contact (when connecting, remove jumper between L and 1)

B DE1 DE2 DE3

- A Floating contact
- (B) EA1 extension

Parameters/codes

- "4b:2" in the "General"/1 group
- Effect of the function on the heating circuit pump: Parameter/coding address "d6" in the "Heating circuit" group (only for weather-compensated control units)
- Effect of the function on the circulation pump for cylinder heating:
 - Parameter/coding address "5E" in the "DHW"/3 group

Parameters/codes

- Set "3A" (DE1), "3b" (DE2) or "3C" (DE3) to 3 or 4 in the "General"/1 group
- Effect of the function on the heating circuit pump: Parameter/coding address "d6" in the "Heating circuit" group (only for weather-compensated control units)
- Effect of the function on the circulation pump for cylinder heating:
- Parameter/coding address "5E" in the **"DHW"/3** group

Outside temperature sensor 1

Fitting outside temperature sensor RF (wireless accessory):



Wireless base station

- Not immediately below balconies or gutters
- Never render over

Fitting location for outside temperature sensor

- North or north-westerly wall, 2 to 2.5 m above ground level; in multi storey buildings, in the top half of the second floor
- Not above windows, doors or vents

Outside temperature sensor connection

2-core lead, length up to 35 m with a cross-section of 1.5 mm²

Power supply for accessories at plug 96 (230 V ~)

- Installation of boiler outside wet rooms:
 Connect the power supply of accessories to the boiler control unit. This connection is switched directly with the ON/OFF switch of the control unit.
- Installation of boiler in a wet room:
 Do not connect the power supply of accessories outside the wet area to the boiler control unit.

If the total system current exceeds 6 A, connect one or more extensions via an ON/OFF switch directly to the mains supply (see next chapter).

Power supply and KM BUS connection of accessories




Danger

Incorrectly executed electrical installations can result in injuries from electrical current and damage to the appliance.

- Route extra low voltage (ELV) leads < 42 V and > 42 V/230 V~ cables separately.
- Strip as little of the insulation is possible, directly before the terminals, and bundle tightly to the corresponding terminals.
- Secure cables with cable ties.

Power supply to all accessories via heat source control unit

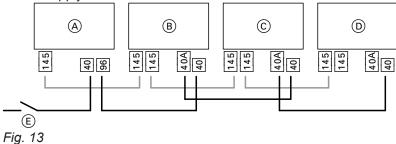

Some accessories with direct power supply

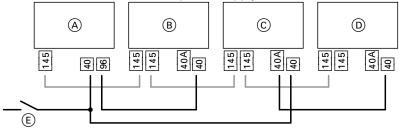


Fig. 14

- (A) Heat source control unit
- Extension kit for heating circuit with mixer M2
- © Extension kit for heating circuit with mixer M3
- AM1 extension, EA1 extension and/or solar control module, type SM1

If the current flowing to the connected working parts (e.g. circulation pumps) is higher than the fuse rating of the respective accessory: Only use the output concerned to control an on-site relay.

- (E) ON/OFF switch
- 40 Mains input
- 40 A Power outlet
- Gontrol unit power outlet
- 145 KM BUS connection

Accessories	Internal fuse protection
Extension kit for heating circuit with mixer	2 A
AM1 extension	4 A
EA1 extension	2 A
Solar control module, type SM1	2 A

Power supply 40



Danger

Incorrectly executed electrical installations can result in injuries from electrical current and damage to the appliance.

Connect the power supply and implement all safety measures (e.g. RCD circuit) in accordance with the following regulations:

- IEC 60364-4-41
- VDE regulations
- Connection conditions of the local grid operator
- Install an isolator in the power cable to provide omnipolar separation from the mains for all active conductors, corresponding to overvoltage category III (3 mm) for complete isolation. The isolator must be fitted in the permanent electrical installation, in line with installation requirements.
- We also recommend installing a pulse current-sensitive RCD (RCD class A \bigcirc).
- Connect the power cable to the electricity supply using a fixed connection.

- If the power supply to the appliance is connected with a flexible power cable, ensure that the live conductors are pulled taut before the earth conductor in the event of strain relief failure. The length of the earth conductor wire will depend on the design.
- Max. fuse rating 16 A.



Danger

The absence of system component earthing can lead to serious injury from electric current if an electrical fault occurs.

The appliance and pipework must be connected to the equipotential bonding of the building.

Routing connecting cables

Please note

If connecting cables come into contact with hot components they will be damaged.

Route and attach the power cables on site in such a way that the maximum permissible temperatures of the cables are not exceeded.

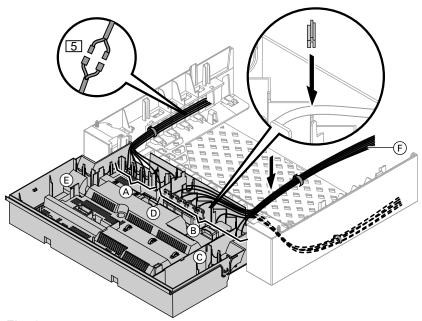


Fig. 15

- A LV terminals
- (B) 230 V terminals
- © Internal extension

- D Main PCB
- (E) Communication module

- F Accessory 230 V connections
- 5 Plugs for connecting the cylinder temperature sensor to the cable harness

Remove the existing cable grommet if using cables with a larger cross-section (up to \emptyset 14 mm). Secure the cable with cable grommet $\widehat{\mathsf{F}}$ integrated into the casing base (black).

Closing the control unit enclosure and inserting the programming unit

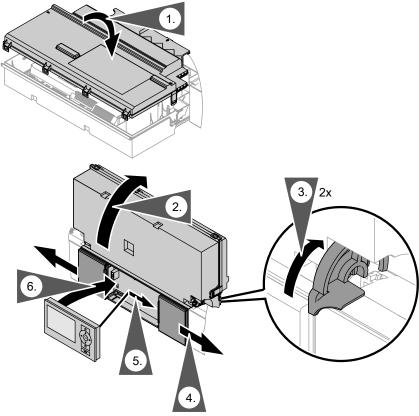


Fig. 16

Insert the programming unit (packed separately) into the control unit support.

Note

The programming unit can also be inserted into a wall mounting base (accessories) near the boiler.



Wall mounting base installation instructions



Steps - commissioning, inspection and maintenance


^	_	€.	
V	V	V	
			I
			- 1
			(

Commissioning steps Inspection steps

Maintenance steps

Page



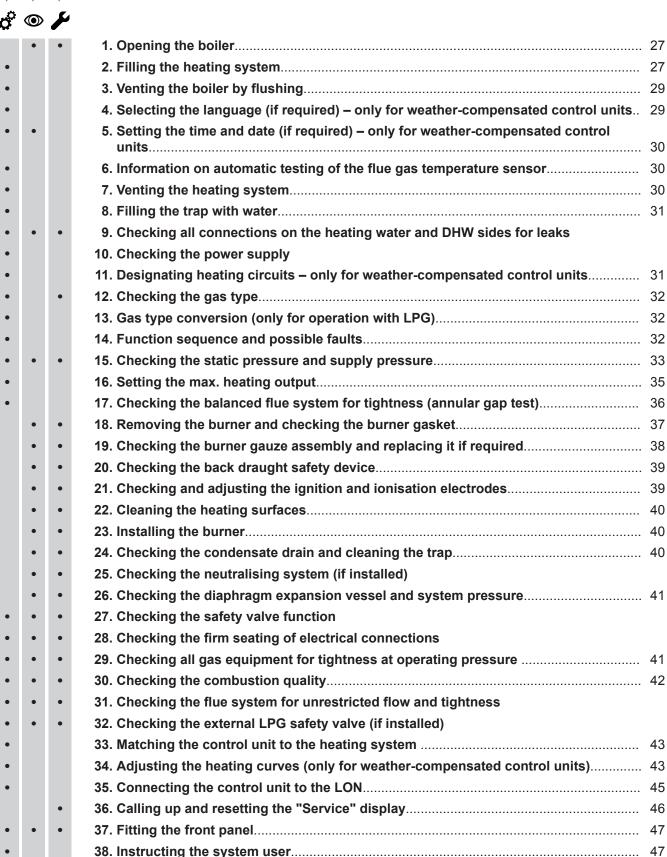

Opening the boiler

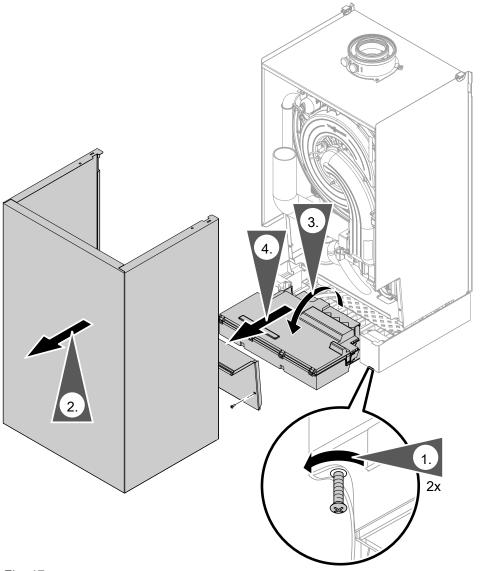


Fig. 17





Filling the heating system

Fill water

According to EN 1717 with DIN 1988-100, as a heat transfer medium for DHW heating, the heating water must meet fluid category \leq 3. This requirement is met if water of potable quality is used as heating water. For example, if additives are used, the additive manufacturer must specify which category the treated heating water comes under.

Please note

Unsuitable fill water increases the level of deposits and corrosion and may lead to appliance damage.

- Flush the heating system thoroughly before filling.
- Only use fill water of potable water quality.
- Special antifreeze suitable for heating systems can be added to the fill water. The antifreeze manufacturer must verify its suitability.
- Fill and top-up water with a water hardness in excess of the following values must be softened, e.g. with a small softening system for heating water.









Filling the heating system (cont.)

Total permissible hardness of the fill and top-up water

Total heating output	Specific system volume					
kW	< 20 I/kW	≥ 20 I/kW to < 50 I/kW	≥ 50 I/kW			
≤ 50	≤ 3.0 mol/m³ (16.8 °dH)	≤ 2.0 mol/m³ (11.2 °dH)	< 0.02 mol/m³ (0.11 °dH)			
> 50 to ≤ 200	≤ 2.0 mol/m³ (11.2 °dH)	≤ 1.5 mol/m³ (8.4 °dH)	< 0.02 mol/m³ (0.11 °dH)			
> 200 to ≤ 600	≤ 1.5 mol/m³ (8.4 °dH)	≤ 0.02 mol/m³ (0.11 °dH)	< 0.02 mol/m³ (0.11 °dH)			
> 600	< 0.02 mol/m ³ (0.11 °dH)	< 0.02 mol/m³ (0.11 °dH)	< 0.02 mol/m³ (0.11 °dH)			

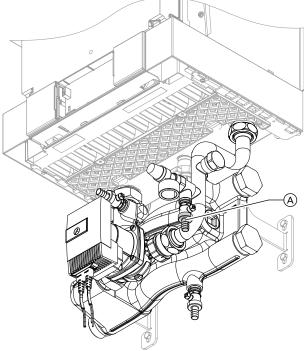


Fig. 18 Connection set with integral low loss header

- **1.** Check the pre-charge pressure of the diaphragm expansion vessel.
- 2. Close the gas shut-off valve.
- **3.** Filling the heating system:
 - Single boiler system: valve (A)
 - Multi boiler system: valve (F) (see page 29)

System pressure > 1.0 bar (0.1 MPa).

4. Close boiler drain & fill valve (A) or (F).

Venting the boiler by flushing

Single boiler system

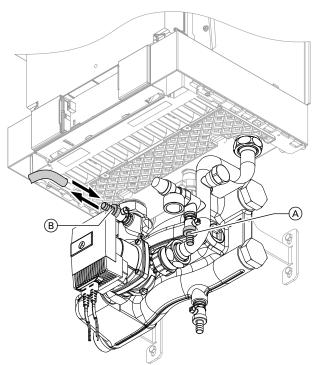



Fig. 19 Connection set with integral low loss header

- 1. Close the shut-off valves on the heating water side.
- **2.** Connect the drain hose to boiler drain & fill valve (B).
- **3.** Open valves (A) and (B). Vent under mains pressure until no more air noise can be heard.
- **4.** Close valves (A) and (B); open the shut-off valves on the heating water side.





Multi boiler system

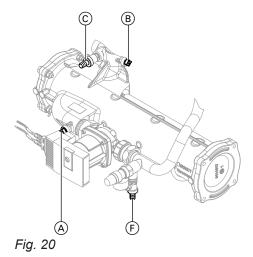

1. Close shut-off valve (A) on the heating water side.

Note

Shut-off valve

B remains open.

- 2. Connect the drain hose to boiler drain & fill valve ©.
- **3.** Open valves © and F. Vent under mains pressure until no more air noise can be heard.
- **4.** Close valves © and F.
- **5.** Re-open shut-off valve (A) on the heating water side.





Selecting the language (if required) – only for weather-compensated control units

At the commissioning stage, the display is in German (factory setting).

4. Set the required language with **△**/▼.

Extended menu:

- 1. ≡∷
- 2. "Settings"
- 3. "Language"







Selecting the language (if required) – only for... (cont.)

 


Fig. 21









The time and date need to be reset during commissioning or after a prolonged time out of use (approx. 18 days).

- 2. "Settings"
- 3. "Time / Date"
- 4. Set current time and date.







Information on automatic testing of the flue gas temperature sensor

Weather-compensated control unit

The control unit automatically checks the function of the flue gas temperature sensor as soon as the time and date have been set.

The display shows: "Testing, flue gas temp sensor" and "Active"

Constant temperature control unit

Immediately after being switched on, the control unit automatically checks the function of the flue gas temperature sensor.

The display shows: "A".

Note

If the flue gas temperature sensor is positioned incorrectly, commissioning is cancelled and fault message A3 is displayed (see page 92).

Note

If the flue gas temperature sensor is positioned incorrectly, commissioning is cancelled and fault message A3 is displayed (see page 92).







Venting the heating system

- 1. Close the gas shut-off valve and switch the control unit ON.
- **3.** Check the system pressure.
- Activate the venting program (see following steps).

Note

For function and sequence of the venting program, see page 102.





Venting the heating system (cont.)

Activating the venting function

Weather-compensated control unit

Service menu

- 1. Press **OK** and **\equiv** simultaneously for approx. 4 s.
- 2. "Service functions"
- 3. "Venting" Venting function is enabled.
- **4.** End the venting function: Press **OK** or **★**.

Constant temperature control unit

Service menu

- 1. Press **OK** and **\equiv** simultaneously for approx. 4 s.
- 2. Select "⑤" with ▶ and confirm with **OK**. "**ON**" flashes.
- **3.** Activate the venting function with **OK**. **"EL on"** is shown constantly.
- **4.** End the venting function: Press **★**.






Filling the trap with water

Multi boiler system:

Fill the trap in the flue gas header with water as well.

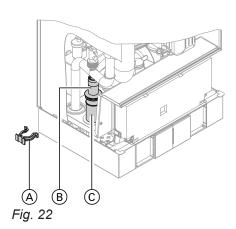

- 1. Remove retaining clip (A) and pull out insert (B).
- 2. Fill trap © with water and reassemble.

Note

Never twist the inlet hose during assembly. Route the drain hose without any bends and with a constant fall.





Checking all connections on the heating water and DHW sides for leaks





Checking the power supply





Designating heating circuits - only for weather-compensated control units

In the delivered condition, heating circuits are designated "Heating circuit 1", "Heating circuit 2" and "Heating circuit 3" (if installed).

If the system user prefers, heating circuits can be renamed to suit the specific system.

To enter names for heating circuits:



Operating instructions











Checking the gas type

The boiler is equipped with an electronic combustion controller that adjusts the burner for optimum combustion in accordance with the prevailing gas quality.


- For operation with natural gas, no adjustment is therefore required across the entire Wobbe index range.
 - The boiler can be operated in the Wobbe index range 9.5 to 15.2 kWh/m³ (34.2 to 54.7 MJ/m³).
- For operation with LPG, the burner must be converted (see "Gas type conversion" on page 32).
- Determine the gas type and Wobbe index by asking your local gas supply utility or LPG supplier.
- **2.** For operation with LPG, convert the burner (see page 32).
- 3. Record the gas type in the report on page 109.







Gas type conversion (only for operation with LPG)

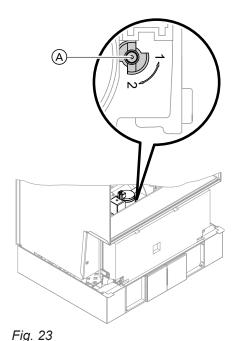

- 1. Set adjusting screw (A) on the gas train to "2".
- 2. Turn ON/OFF switch "@" to ON.
- 3. Select the gas type in coding address "82":
 - Call up code 2
 - Call up "General" (weather-compensated control units)

or

Group "1" (constant temperature control units)


- In coding address "11", select value "9"
- In coding address "82", select value "1" (LPG operation)
- In code "11", select value ≠ "9".
- End service functions.
- 4. Open the gas shut-off valve.
- 5. Affix label "G 31" to the cover panel in a clearly visible position near the gas train.
 The label is supplied with the technical documentation.








Function sequence and possible faults

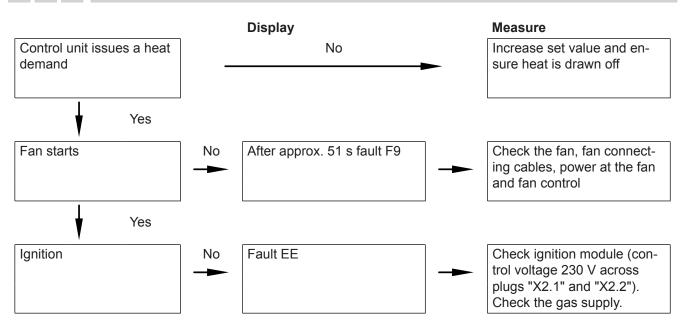





Function sequence and possible faults (cont.)

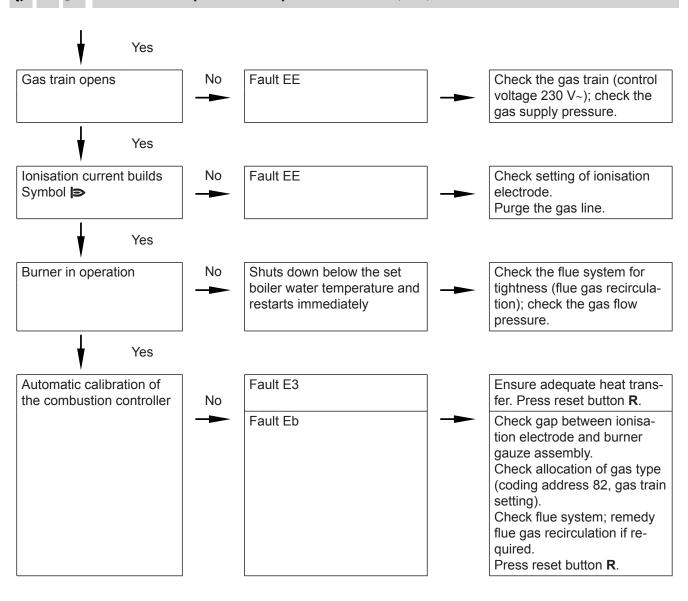

For further details regarding faults, see page 80.



Checking the static pressure and supply pressure



Danger

CO formation as a result of incorrect burner adjustment can have serious health implications. Check the CO content before and after carrying out work on gas appliances.

Operation with LPG

Purge the LPG tank twice on commissioning or replacement. Vent the tank and gas connection line thoroughly after purging.





Checking the static pressure and supply pressure (cont.)

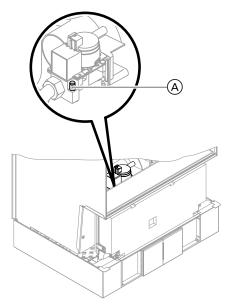


Fig. 24

- 1. Close the gas shut-off valve.
- 2. Release screw (A) inside test connector "PE" on the gas train, but do not remove it. Connect the pressure gauge.
- 3. Open the gas shut-off valve.
- 4. Check the static pressure and record the actual value in the report on page 109. Set value: Max. 57.5 mbar (5.75 kPa)
- 5. Start the boiler.

Note

During commissioning, the appliance can enter a fault state because of airlocks in the gas line. After approx. 5 s, press **R** to reset the burner.

6. Check the supply (flow) pressure. For set values, see the following table.

Note

Use a suitable measuring device with a resolution of at least 0.1 mbar (0.01 kPa) to check the supply pressure.

- Record the actual value in the report. Implement measures as indicated in the table below.
- 8. Shut down the boiler. Close the gas shut-off valve and remove the pressure gauge.

 Close test connector (A) with the screw.

). V

Danger

Gas escaping from the test connector leads to a risk of explosion.
Check for gas tightness.

Open the gas shut-off valve. Start up the appliance. Check gas tightness at test connector (A).







o^o



Checking the static pressure and supply pressure (cont.)

Supply pressure (flow pressure)					Measures
For natural gas			For LPG		
Н	E, E+, M	L, LL, S, K	Lw		
Below 13 mbar (1.3 kPa)	Below 17 mbar (1.7 kPa)	Below 18 mbar (1.8 kPa)	Below 16 mbar (1.6 kPa)	Below 25 mbar (2.5 kPa)	Do not commission the boiler. Notify your gas supply utility or LPG supplier.
13 to 33 mbar (1.3 to 3.3 kPa)	17 to 33 mbar (1.7 to 3.3 kPa)	18 to 33 mbar (1.8 to 3.3 kPa)	16 to 33 mbar (1.6 to 3.3 kPa)	25 to 57.5 mbar (2.5 to 5.75 kPa)	Start the boiler.
Above 33 mbar (3.3 kPa)	Above 33 mbar (3.3 kPa)	Above 33 mbar (3.3 kPa)	Above 33 mbar (3.3 kPa)	Above 57.5 mbar (5.75 kPa)	Install a separate gas pressure governor upstream of the system. Set the pre-charge pressure to 20 mbar (2.0 kPa) for natural gas and 50 mbar (5.0 kPa) for LPG. Notify your gas supply utility or LPG supplier.





Setting the max. heating output

A limit can be set on the maximum heating output for **heating mode**. The limit is set via the modulation range. The upper limit of the max. adjustable heating output is set by the coding card.

Weather-compensated control unit

Service menu

- 1. Press **OK** and **\equiv** simultaneously for approx. 4 s.
- 2. "Service functions"
- 3. "Max. output"
- 4. "Change?" Select "Yes". A value is shown on the display (e.g. "85"). In the delivered condition, this value represents 100 % of the rated heating output.
- **5.** Set the required value.

Constant temperature control unit

Service menu

- 1. Press **OK** and **\equiv** simultaneously for approx. 4 s.
- Select "3" with > and confirm with OK.
 The display shows "FL" and "on" flashes.
- Confirm with OK and ensure the flow rate is sufficient.
 While flow rate measuring is active, "FL" flashes on the display and "on" is shown.
- 4. When the required flow rate is reached, the set heating output (e.g. "85") flashes on the display and ">" is shown. In the delivered condition, this value represents 100 % of the rated heating output
- **5.** Select the required value and confirm with **OK**.







Checking the balanced flue system for tightness (annular gap test)

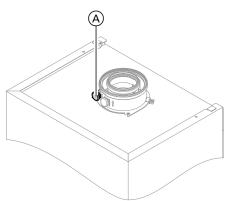


Fig. 25

A Combustion air aperture

For balanced flue systems tested together with the heat generator, there is no requirement for a tightness test (overpressure test) during commissioning by the flue gas inspector.

In this case, we recommend that a simple tightness test is carried out during system commissioning. For this, check the CO₂ or O₂ concentration in the combustion air at the annular gap of the balanced flue pipe. If the CO₂ concentration is less than 0.2 % or the O₂ concentration is greater than 20.6 %, the flue pipe is deemed to be sufficiently gas-tight. If actual CO₂ values are greater or O₂ values are lower, then pressure test the flue pipe with a static pressure of 200 Pa.



Please note

If the test port is not sealed, combustion air is drawn in from the room. After the tightness test, re-seal the test port with the plug.













Removing the burner and checking the burner gasket

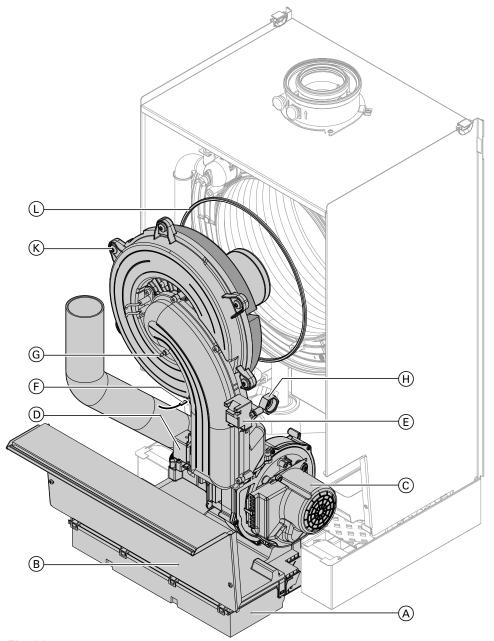


Fig. 26

- **1.** Turn off the ON/OFF switch on the control unit and the power supply.
- **2.** Close the gas shut-off valve and safeguard against reopening.
- **3.** Pivot control unit (A) forwards.
- **4.** Remove cover panel B.
- **5.** Remove the electrical cables from the following components:
 - Fan motor ©
 - Gas train ①
 - Ignition unit (E)
 - Earthing point (F)
 - Ionisation electrode ⑤

- **6.** Undo gas supply pipe fitting \mathbb{H} .
- 7. Undo 6 screws (K) and remove the burner.

Please note

- To prevent damage, never touch the mesh of the burner gauze assembly.
- **8.** Check burner gasket (L) for damage and replace if required.



Checking the burner gauze assembly and replacing it if required

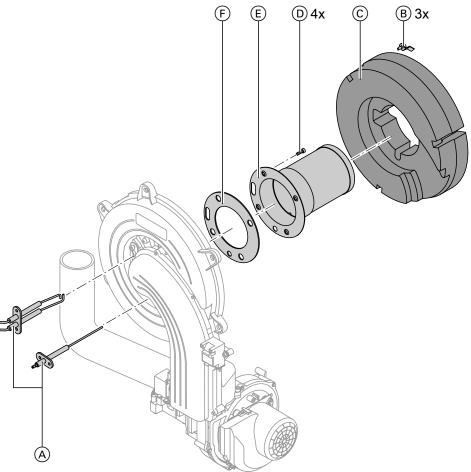


Fig. 27

- 1. Remove electrodes (A).
- **2.** Undo 3 retaining clips (B) on thermal insulation ring (C). Remove thermal insulation ring (C).
- 3. Undo 4 Torx screws \bigcirc . Remove burner gauze assembly \bigcirc .
- **4.** Remove old burner gauze assembly gasket (F).
- **5.** Insert a new burner gauze assembly with a new gasket and secure with 4 Torx screws.

Note

Torque: 4.5 Nm

6. Refit thermal insulation ring © and electrodes A.





Checking the back draught safety device

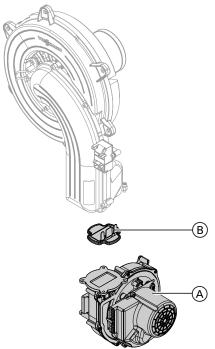



Fig. 28


- **1.** Undo 3 screws and remove fan (A).
- Remove back draught safety device (B).
- 3. Check the damper and gasket for dirt and damage. Replace if required.
- 4. Refit back draught safety device (B).
- **5.** Refit fan (A) and secure with 3 screws. Torque: 3.0 Nm







   Checking and adjusting the ignition and ionisation electrodes





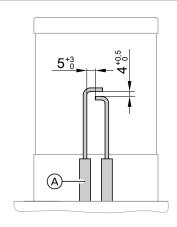



14±1

- A Ignition electrodes
- Ionisation electrode
- 1. Check the electrodes for wear and contamination.
- 2. Clean the electrodes with a small brush (not a wire brush) or sandpaper.
 - Please note Wire mesh: do not damage.

3. Check the electrode gaps. If the gaps are not as specified or the electrodes are damaged, replace and align the electrodes together with new gaskets. Tighten the screws of the electrodes. Torque: 2.0 Nm











Cleaning the heating surfaces

Please note

Scratches to the surfaces of the heat exchanger that come into contact with hot gas can result in corrosion damage. Brushing can cause deposits to become lodged in the gaps between the coils. **Never use brushes to clean the heating surfaces.**

Please note

Prevent damage due to cleaning water. Cover electronic components with suitable watertight material.

Note

Discolouration on the heat exchanger surface is a normal sign of use. It has no bearing on the function and service life of the heat exchanger.

The use of chemical cleaning agents is not required.

- 2. Flush heating surface (A) with water.
- **3.** Check condensate drain. Clean the trap: See the following chapter.
- **4.** Check the thermal insulation mat (if installed) in the heat exchanger for damage, replace if necessary.

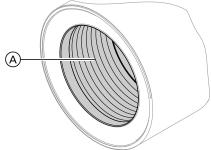


Fig. 30







Installing the burner

- **1.** Insert the burner and tighten the screws diagonally. Torque: 8.5 Nm
- Install the gas supply pipe with a new gasket and tighten the fitting. Torque: 15 Nm
- 3. Check the gas connections for tightness.



Danger

Escaping gas leads to a risk of explosion. Check the fitting for gas tightness.

4. Connect the electrical cables to the corresponding components.





Checking the condensate drain and cleaning the trap


Multi boiler system:

Clean the trap in the flue gas header as well.





Checking the condensate drain and cleaning the... (cont.)

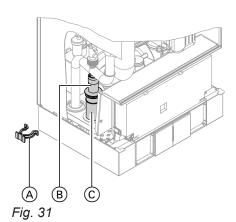

- 1. Remove retaining clip (A) and pull out insert (B).
- **2.** Clean trap © and check that the condensate can drain freely.
- **3.** Fill trap © with water and reassemble.

Note

Never twist the inlet hose during assembly. Route the drain hose without any bends and with a constant fall.





Checking the neutralising system (if installed)





Checking the diaphragm expansion vessel and system pressure

Note

Check the diaphragm expansion vessel when the system is cold.

- 1. Drain the system or close the cap valve on the diaphragm expansion vessel and reduce the pressure until the pressure gauge indicates "0".
- 2. If the pre-charge pressure of the diaphragm expansion vessel is lower than the static system pressure: top up with nitrogen until the pre-charge pressure is 0.1 to 0.2 bar (10 to 20 kPa) higher than the static pressure.
- Top up with water until the charge pressure of the cooled system is 0.1 to 0.2 bar (10 to 20 kPa) higher than the pre-charge pressure of the diaphragm expansion vessel.
 - Permiss. operating pressure: 4 bar (0.4 MPa)





Checking the safety valve function





Checking the firm seating of electrical connections





Checking all gas equipment for tightness at operating pressure



Danger

Escaping gas leads to a risk of explosion. Check all gas equipment for tightness.

Note

Only use suitable and approved leak detection agents (EN 14291) and devices for the tightness test. Leak detection agents with unsuitable constituents (e.g. nitrides, sulphides) can cause material damage. Remove residues of the leak detection agent after testing.













The electronic combustion controller automatically ensures optimum combustion quality. During commissioning/maintenance, only the combustion values need to be checked. For this, measure the CO content plus the CO_2 or O_2 content. For a description of the electronic combustion controller functions, see page 106.

Note

To prevent operating faults and damage, operate the appliance with uncontaminated combustion air.

CO content

■ The CO content must be < 1000 ppm for all gas types.

CO₂ or O₂ content

- The CO₂ content must be within the following limits for the lower and upper heating output respectively:
 7.5 to 9.5 % for natural gas E and LL
- 8.8 to 11.1 % for LPG P
- The O₂ content must be between 4.0 and 7.6 % for all gas types.

If the actual CO_2 or O_2 values lie outside their respective ranges, check the balanced flue system for tightness; see page 36.

Note

During commissioning, the combustion controller carries out an automatic calibration. Only measure the emissions approx. 30 s after the burner has started.

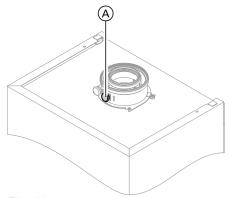


Fig. 32

- **2.** Open the gas shut-off valve. Start the boiler and create a heat demand.
- 3. Set the lower heating output (see page 42).
- 4. Check the CO₂ content. Should the actual value deviate from the aforementioned ranges by more than 1 %, implement measures detailed on page 42.
- **5.** Enter the actual value into the report.
- 6. Set the upper heating output (see page 42).
- Check the CO₂ content. Should the actual value deviate from the aforementioned ranges by more than 1 %, implement measures detailed on page 42.
- 8. After testing, press OK.
- 9. Enter the actual value into the report.

Selecting the upper/lower heating output

Weather-compensated control unit

Service menu

- 1. Press **OK** and **\equiv** simultaneously for approx. 4 s.
- 2. "Actuator test"

- Select the lower heating output: Select "Base load OFF". Then "Base load ON" appears and the burner runs at its lower heating output.
- 4. Select the upper heating output: Select "Full load OFF". Then "Full load ON" appears and the burner runs at its upper heating output.



Checking the combustion quality (cont.)

- 5. End output selection: Press **5**.
- Constant temperature control unit

Service menu

- 1. Press **OK** and **\equiv** simultaneously for approx. 4 s.
- 2. Use ▶ to select "□ and confirm with OK. The display shows "I" and "ON" flashes.
- 3. Select the lower heating output: Press **OK**, "**ON**" will be displayed constantly.

- 4. Select the upper heating output: Press **1**.
- 5. Select "2" with ▶, "ON" flashes.
- 6. Press OK, "ON" will be displayed constantly.
- 7. End output selection: Press **5**.







Checking the flue system for unrestricted flow and tightness





Checking the external LPG safety valve (if installed)





Matching the control unit to the heating system

The control unit must be matched to the equipment level of the system. Various system components are recognised automatically by the control unit and the relevant codes are set automatically.

For individual coding steps, see page 48.







Adjusting the heating curves (only for weather-compensated control units)

The heating curves illustrate the relationship between the outside temperature and the boiler water or flow temperature.

To put it simply, the lower the outside temperature, the higher the boiler water or flow temperature.

The boiler water or flow temperature in turn affects the room temperature.

Settings in the delivered condition:

- Slope = 1.4
- Level = 0

Note

If the heating system includes heating circuits with mixers, then the flow temperature of the heating circuit without mixer is higher by a selected differential (8 K in the delivered condition) than the flow temperature of the heating circuits with mixers.

The differential temperature is adjustable via coding address "9F" in the "General" group.







Adjusting the heating curves (only for... (cont.)

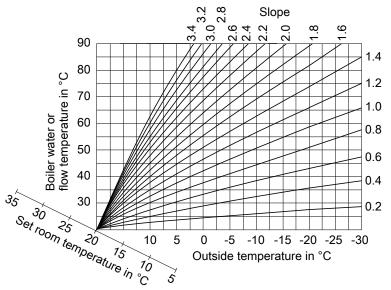


Fig. 33

Slope setting ranges:

■ Underfloor heating systems: 0.2 to 0.8

■ Low temperature heating systems: 0.8 to 1.6

Selecting the set room temperature

Individually adjustable for each heating circuit. The heating curve is offset along the set room temperature axis. With the heating circuit pump logic function active, the curve modifies the start and stop characteristics of the heating circuit pump.

Standard set room temperature

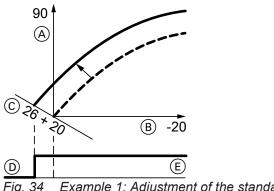


Fig. 34 Example 1: Adjustment of the standard set room temperature from 20 to 26 °C

- A Boiler water temperature or flow temperature in °C
- B Outside temperature in °C
- © Set room temperature in °C
- D Heating circuit pump "OFF"
- E Heating circuit pump "ON"

Changing the standard set room temperature

Operating instructions

Reduced set room temperature

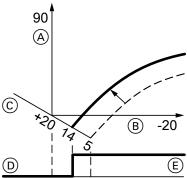


Fig. 35 Example 2: Adjustment of the reduced set room temperature from 5 °C to 14 °C

- A Boiler water temperature or flow temperature in °C
- (B) Outside temperature in °C
- © Set room temperature in °C
- D Heating circuit pump "OFF"
- E Heating circuit pump "ON"

Changing the reduced set room temperature



Operating instructions

Changing the slope and level

Individually adjustable for each heating circuit.

Fig. 36

Press the following buttons for the extended menu:

1. **\equiv** to call up the menu.

2. "Heating" select

3. ◀/▶ to select the heating circuit.

4. "Heating curve" select

5. "Slope" or **"Level"** to change the heating curve in accordance with requirements.

(B) Changing the level (vertical parallel offset of the heating curve)





(A) Changing the slope

Connecting the control unit to the LON

The LON communication module must be plugged in.

Note

The data transfer via LON can take several minutes.

Example: Single boiler system with Vitotronic 200-H and Vitocom 200

Set the LON subscriber numbers and further functions via code 2 (see the following table).

Note

The same subscriber number must **not** be allocated twice within the LON.

Only one Vitotronic may be programmed as fault manager.

All coding addresses in the table are listed in the "General" group.

Boiler control unit	Vitotronic 200-H	Vitotronic 200-H	Vitocom
LON	LON	LON	
Subscriber no. 1 Code "77:1"	Subscriber no. 10 Code "77:10"	Subscriber no. 11 Set code "77:11".	Subscriber no. 99
Control unit is fault manager. Code "79:1"	Control unit is not fault manager. Code "79:0"	Control unit is not fault manager. Code "79:0"	Device is fault manager.
Control unit transmits the time. Code "7b:1"	Control unit receives the time. Set code "81:3".	Control unit receives the time. Set code "81:3".	Device receives the time.
Control unit sends outside temperature. Set code "97:2".	Control unit receives outside temperature. Set code "97:1".	Control unit receives outside temperature. Set code "97:1".	_













Connecting the control unit to the LON (cont.)

Boiler control unit	Vitotronic 200-H	Vitotronic 200-H	Vitocom
Viessmann system number. Code "98:1"	Viessmann system number. Code "98:1"	Viessmann system number. Code "98:1"	_
LON subscriber fault monitoring.	LON subscriber fault monitoring.	LON subscriber fault monitoring.	_
Code "9C:20"	Code "9C:20"	Code "9C:20"	

Carrying out a LON subscriber check

The subscriber check is used to test communication with the system devices connected to the fault manager.

Requirements:

- The control unit must be programmed as fault manager (code "79:1" in the "General" group).
- The LON subscriber number must be programmed in all control units.
- The LON subscriber list in the fault manager must be up to date.

Service menu:

- 1. Press **OK** and **\equiv** simultaneously for approx. 4 s.
- 2. "Service functions"

3. "Subscriber check"

- 4. Select subscriber (e.g. subscriber 10).
- 5. Start the subscriber check with "OK".
- Successfully tested subscribers are designated with "OK".
- Unsuccessfully tested subscribers are identified with "Not OK".

Note

To perform another subscriber check: Create a new subscriber list with "Delete list?" (subscriber list is updated).

Note

During the subscriber check, the display of the relevant subscriber shows the subscriber no. and "Wink" for approx. 1 min.







Calling up and resetting the "Service" display

The red fault indicator flashes when the limits set in coding addresses "21" and "23" have been reached. (Coding address in group **"Boiler"** (weather-compensated control unit) or group 2 (constant temperature control unit).)

Weather-compensated control unit

Display

"Service" and " / "

Acknowledging a service

Press **OK**.

Perform maintenance.

Note

An acknowledged service message that has not been reset reappears the following Monday.

After maintenance has been carried out, reset the codes

Service menu:

1. Press **OK** and **\equiv** simultaneously for approx. 4 s.

- 2. "Service functions"
- 3. "Service reset"

Note

The selected service parameters for hours run and time interval restart at "0".

Constant temperature control unit

Display

The specified hours run or the specified time interval with calendar symbol "\(\delta \)" (subject to setting) and "\(\neq \)"

Acknowledging a service

Press OK.

Perform maintenance.

Note

An acknowledged service message that has not been reset reappears after 7 days.

After maintenance has been carried out, reset the codes

Reset code "24:1" in group 2 to "24:0".





Calling up and resetting the "Service" display (cont.)

Note

The selected service parameters for hours run and time interval restart at "0".





Fitting the front panel

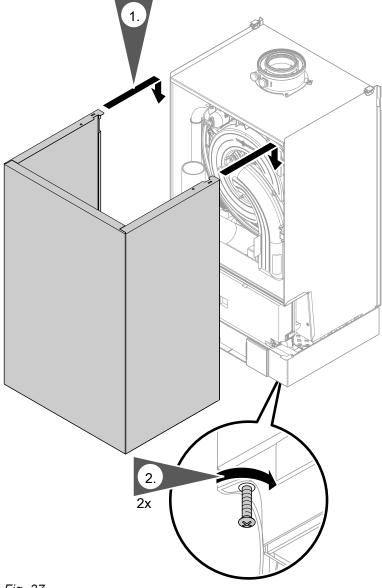


Fig. 37

Note

Ensure the locking screws are fitted before operating the appliance.







Instructing the system user

The system installer should hand the operating instructions to the system user and instruct the user in operating the system.





Calling up coding level 1

- On weather-compensated control units, codes are displayed as plain text.
- Codes that are not assigned due to the heating system equipment level or the setting of other codes are not displayed.
- Heating systems with one heating circuit without mixer and one or two heating circuits with mixer: The heating circuit without mixer is designated "Heating circuit 1" and the heating circuits with mixer as "Heating circuit 2" or "Heating circuit 3". If the heating circuits were given individual designations, the selected designation and "HC1", "HC2" or "HC3" appear instead.

The codes are divided into groups

Weather-compensated control unit

- "General"
- "Boiler"
- "DHW"
- "Solar"
- "Heating circuit 1/2/3"
- "All codes std device"

In this group, all coding addresses from coding level 1 (except the coding addresses from the **"Solar"** group) are displayed in ascending order.

■ "Standard setting"

Constant temperature control unit

- 1: "General"
- 2: "Boiler"
- 3: "DHW"
- 4: "Solar"
- 5: "Heating circuit 1"
- 6: "All codes std device" In this group, all coding addresses are displayed in ascending order.
- 7: "Standard setting"

Calling up coding level 1

Weather-compensated control unit

1. Press **OK** and **\equiv** simultaneously for approx. 4 s.

2. "Coding level 1"

- 3. Select the group of required coding addresses.
- 4. Select the coding address.
- Set the value according to the following tables and confirm with OK.

Constant temperature control unit

- 1. Press **OK** and **\equiv** simultaneously for approx. 4 s.
- 2. Select "①" with ▶ for coding level 1 and confirm with **OK**.
- **3.** "I" flashes on the display for the coding addresses in group 1.
- **4.** Select the group of the required coding address with △/▼ and confirm with **OK**.
- 5. Select coding address with ▲/▼.
- Set value according to the following tables with ▲/▼ and confirm with OK.

Resetting all codes to their delivered condition

Weather-compensated control unit

Select "Standard setting".

Note

This also resets the codes at coding level 2.

Constant temperature control unit

Select "7" with ▶ and confirm with **OK**. When "¾" flashes, confirm with **OK**.

Note

This also resets the codes at coding level 2.

General/group "1"

Select **"General"** for weather-compensated control units (see page 48).

Select "1" for constant temperature control units (see page 48).

Coding in the delivered condition		Possible change	
System design			
00:1	System version 1: One heating circuit without mixer A1 (heating circuit 1), without DHW heating	00:2 to 00:10	For system schemes, see the following table:

Value, ad- dress 00:	System ver- sion	Description
2	1	One heating circuit without mixer A1 (heating circuit 1), with DHW heating (code is set automatically)
3	2,3	One heating circuit with mixer M2 (heating circuit 2), without DHW heating
4	2,3	One heating circuit with mixer (heating circuit 2), with DHW heating
5	2,3	One heating circuit without mixer A1 (heating circuit 1) and one heating circuit with mixer M2 (heating circuit 2), without DHW heating (code is set automatically)
6	2,3	One heating circuit without mixer A1 (heating circuit 1) and one heating circuit with mixer M2 (heating circuit 2), with DHW heating (code is set automatically)
7	4	One heating circuit with mixer M2 (heating circuit 2) and one heating circuit with mixer M3 (heating circuit 3), without DHW heating
8	4	One heating circuit with mixer M2 (heating circuit 2) and one heating circuit with mixer M3 (heating circuit 3), with DHW heating
9	4	One heating circuit without mixer A1 (heating circuit 1), one heating circuit with mixer M2 (heating circuit 2) and one heating circuit with mixer M3 (heating circuit 3), without DHW heating (code is set automatically)
10	4	One heating circuit without mixer A1 (heating circuit 1), one heating circuit with mixer M2 (heating circuit 2) and one heating circuit with mixer M3 (heating circuit 3), with DHW heating (code is set automatically)

Coding in the delivered condition		Possible change	
Internal circulation pump function			
51:0	System with low loss header: The internal circulation pump is always started when there is a heat demand	51:1	System with low loss header: The internal circulation pump is only started when there is a heat demand if the burner is running. The circulation pump stops when the run-on time ends.
		51:2	System with heating water buffer cylinder: The internal circulation pump is only started when there is a heat demand if the burner is running.



Code 1

General/group "1" (cont.)

Coding in the delivered condition		Possible change	
Subscriber no.		1	
77:1	LON subscriber number (only for weather-compensated control units)	77:2 to 77:99	LON subscriber number, adjustable from 1 to 99: 1 - 4 = boiler 5 = cascade 10 - 97 = Vitotronic 200-H 98 = Vitogate 99 = Vitocom Note Allocate each number only once.
Detached house/	apartment building		
7F:1	Detached house (only for weather-compensated control units)	7F:0	Apartment building Holiday program and time program for DHW heating can be set sepa- rately.
Lock out controls	s		
menu and extended m	Operation enabled in standard menu and extended menu. Note	8F:1	Operation locked out in standard menu and extended menu. Emissions test mode can be enabled.
	The relevant code is only enabled when you exit the service menu.	8F:2	Operation enabled in standard menu, but locked out in extended menu. Emissions test mode can be enabled.
Set flow tempera	ture for external demand	-	
9b:70	Set flow temperature for external demand 70 °C	9b:0 to 9b:127	Set flow temperature for external demand adjustable from 0 to 127 °C (limited by boiler-specific parameters)

Boiler/group "2"

Select **"Boiler"** for weather-compensated control units (see page 48).

Select "2" for constant temperature control units (see page 48).

Coding in the delivered condition		Possible cl	hange
Single/multi-boiler system			
01:1	Single boiler system (only for constant temperature control units)	01:2	Multi boiler system with Vitotronic 300-K
Boiler number			
07:1	Boiler number in multi boiler systems (only for constant temperature control units)	07:2 to 07:4	Boiler number 2 to 4 in multi boiler systems

Boiler/group "2" (cont.)

Coding in the delivered condition		Possible change		
Burner service in 100 hours				
21:0	No service interval set (in hours run)	21:1 to 21:100	The number of hours run before the burner should be serviced is adjustable from 100 to 10,000 h One step \(^2\) 100 h	
Service inte	rval in months	•		
23:0	No time set for burner service interval	23:1 to 23:24	Interval adjustable from 1 to 24 months	
Service stat	us			
24:0	"Service" not shown on the display	24:1	"Service" shown on the display. The address is set automatically and must be reset manually after a service.	
Filling/venti	ng			
2F:0	Venting program/filling program	2F:1	Venting program enabled	
	disabled	2F:2	Filling program enabled	

DHW/group "3"

Select **"DHW"** for weather-compensated control units (see page 48).

Select "3" for constant temperature control units (see page 48).

Coding

Coding in the delivered condition		Possible chang	ge	
Set DHW temperature reheating suppression				
67:40	For solar DHW heating: set DHW temperature 40 °C. Reheating is suppressed above the selected set temperature: boiler only starts as backup if the rise in the DHW temperature is too low. Cannot be adjusted on gas condensing combi boilers	67:0 to 67:95	Set DHW temperature adjustable from 0 to 95 °C (limited by boiler-specific parameters)	
Enable DHW cir	culation pump			
73:0	DHW circulation pump: "ON" according to time program (only for weather-compensated control units)	73:1 to 73:6 73:7	"ON" from once per hour for 5 min up to 6 times per hour for 5 min during the time program Permanently "ON"	

Solar/group "4"

Select **"Solar"** for weather-compensated control units (see page 48).

Select **"4"** for constant temperature control units (see page 48).

Note

The solar group is only displayed if a solar control module, type SM1, is connected.

Coding

Coding in the delivered condition		Possible change	
Speed contro	l solar circuit pump	1	
02:	Data dependent on the software version of solar control module	02:0	Solar circuit pump is not speed-controlled
	SM1	02:1	With wave packet control function Never adjust
		02:2	Solar circuit pump is speed-control- led with PWM control
Maximum cyli	inder temperature	•	
08:60	The solar circuit pump is switched off when the actual DHW temperature reaches the maximum cylinder temperature (60 °C).	08:10 to 08:90	Set DHW temperature adjustable from 10 to 90 °C.
Stagnation tin	ne reduction		
0A:5	Temperature differential for stagna-	0A:0	Stagnation time reduction not active.
	tion time reduction (reduction in the speed of the solar circuit pump to protect system components and heat transfer medium) 5 K.	0A:1 to 0A:40	Temperature differential adjustable from 1 to 40 K.
Flow rate sola	ar circuit	1	-
0F:70	Solar circuit flow rate at the maximum pump speed 7 l/min.	0F:1 to 0F:255	Flow rate adjustable from 0.1 to 25.5 l/min, 1 step ≙ 0.1 l/min.
Extended sola	ar control functions		'
20:0	No extended control function ena-		Auxiliary function for DHW heating
	bled	20:2	Differential temperature control 2.
		20:3	Differential temperature control 2 and auxiliary function.
			Differential temperature control 2 for central heating backup.
		20:5	Thermostat function
		20:6	Thermostat function and auxiliary function
		20:7	Solar heating via external heat exchanger without additional temperature sensor
		20:8	Solar heating via external heat exchanger with additional temperature sensor
		20:9	Solar heating of 2 DHW cylinders

Heating circuit 1, heating circuit 2, heating circuit 3/group "5"

Select "Heating circuit ..." for weather-compensated control units (see page 48).

Select "5" for constant temperature control units (see page 48).

Coding in the delivered condition		Possible ch	ange	
Priority DHW heating				
A2:2	Cylinder priority applicable to heating circuit pump and mixer	A2:0	Without cylinder priority applicable to heating circuit pump and mixer	
		A2:1	Cylinder priority only applicable to mixer	
		A2:3 to A2:15	Reduced priority applicable to mixer: the heating circuit receives a reduced amount of energy.	
Economy fu	nction outside temperature	•		
A5:5	With heating circuit pump logic function (economy mode): heating	A5:0	Without heating circuit pump logic function	
	circuit pump "OFF" when the outside temperature (OT) is 1 K higher than the set room temperature (RT _{set}) OT > RT _{set} + 1 K (only for weather-compensated control units)	A5:1 to A5:15	With heating circuit pump logic function: heating circuit pump "OFF" (see the following table)	

Parameter address A5:	With heating circuit pump logic function: heating circuit pump "OFF"
1	OT > RT _{set} + 5 K
2	OT > RT _{set} + 4 K
3	OT > RT _{set} + 3 K
4	OT > RT _{set} + 2 K
5	OT > RT _{set} + 1 K
6	OT > RT _{set}
7	OT > RT _{set} - 1 K
to	
15	OT > RT _{set} - 9 K

Coding in the delivered condition		Possible change			
Extended ed	Extended economy function adjusted outside temperature				
A6:36	Extended economy mode disa- bled (only for weather-compensa- ted control units)	A6:5 to A6:35	Extended economy mode enabled: the burner and heating circuit pump will stop and the mixer will be closed at a variable value, adjustable between 5 and 35 °C plus 1 °C. The basis for this is the adjusted outside temperature. This is composed of the actual outside temperature and a time constant that takes account of the way an average building cools down.		



Code 1

Coding in the delivered condition		Possible char	nge
Extended econ	nomy function mixer		
A7:0	Without mixer economy function. Only for weather-compensated control units and heating circuits with mixer.	A7:1	With mixer economy function (extended heating circuit pump logic): Heating circuit pump also "OFF": If the mixer has been trying to close for longer than 20 min. Heating circuit pump "ON": If the mixer changes to control function If there is a risk of frost
Pump idle time	e, transition reduced mode		
A9:7	With pump idle time: heating circuit	A9:0	Without pump idle time
	pump "OFF" if the set value is altered through a change in operating mode or through a change in the set room temperature (only for weather-compensated control units)	A9:1 to A9:15	With pump idle time, adjustable from 1 to 15. The higher the value, the longer the pump idle time.
Weather-comp	ensated/room temperature hook-up		
b0:0	With remote control: heating mode/ reduced mode: weather-compensated (only for weather-compensated control units). Change code only for the heating circuit with mixer.	b0:1	Heating mode: weather-compensated Reduced mode: with room temperature hook-up
		b0:2	Heating mode: with room temperature hook-up Reduced mode: weather-compensated
		b0:3	Heating mode/reduced mode: with room temperature hook-up
Economy func	tion room temperature		•
b5:0	With remote control: no room temperature-dependent heating circuit pump logic function (only for weather-compensated control units). Change code only for the heating circuit with mixer.	b5:1 to b5:8	For heating circuit pump logic function, see the following table:
Parameter add	ress With heating circuit pump log	ic function:	

Parameter address	With heating circuit pump logic fur	nction:
b5:	Heating circuit pump "OFF"	Heating circuit pump "ON"
1	RT _{actual} > RT _{set} + 5 K	RT _{actual} < RT _{set} + 4 K
2	RT _{actual} > RT _{set} + 4 K	RT _{actual} < RT _{set} + 3 K
3	RT _{actual} > RT _{set} + 3 K	RT _{actual} < RT _{set} + 2 K
4	RT _{actual} > RT _{set} + 2 K	RT _{actual} < RT _{set} + 1 K
5	RT _{actual} > RT _{set} + 1 K	RT _{actual} < RT _{set}
6	RT _{actual} > RT _{set}	RT _{actual} < RT _{set} - 1 K
7	RT _{actual} > RT _{set} - 1 K	RT _{actual} < RT _{set} - 2 K
3	RT _{actual} > RT _{set} - 2 K	RT _{actual} < RT _{set} - 3 K

Coding in the delivered condition		Possible change		
Min. flow temp	perature heating circuit			
C5:20	Electronic minimum flow tempera- ture limit 20 °C (only for weather- compensated control units)	C5:1 to C5:127	Minimum limit adjustable from 1 to 127 °C (limited by boiler-specific parameters)	
Max. flow tem	perature heating circuit			
C6:74	Electronic maximum flow temperature limit 74 °C (only for weather-compensated control units)	C6:10 to C6:127	Maximum limit adjustable from 10 to 127 °C (limited by boiler-specific parameters)	
Heating progra	am changeover			
d5:0	The external operating program changeover switches the operating program to "Constant operation with reduced room temperature" or "Standby mode" (only for weather-compensated control units)	d5:1	The external operating program changeover switches to "Constant operation with standard room temperature" (subject to coding addresses 3A, 3b and 3C)	
Ext. heating p	rogram changeover to heating circuit			
d8:0	No operating program changeover via EA1 extension	d8:1	Operating program changeover via input DE1 at EA1 extension	
		d8:2	Operating program changeover via input DE2 at EA1 extension	
		d8:3	Operating program changeover via input DE3 at EA1 extension	
Max. pump sp	eed in standard mode	1	·	
E6:	Maximum speed of the variable speed heating circuit pump in % of the max. speed in standard mode. Value is specified by boiler-specific parameters (only for weather-compensated control units).	E6:0 to E6:100	Maximum speed adjustable from 0 to 100 %	
Min. pump spe	eed	1		
E7:30	Minimum speed of the variable speed heating circuit pump: 30 % of the max. speed (only for weather-compensated control units)	E7:0 to E7:100	Minimum speed adjustable from 0 to 100 % of maximum speed	
Screed drying	·			
F1:0	Screed drying disabled (only for weather-compensated control units).	F1:1 to F1:6	Screed drying can be set with 6 adjustable temperature/time profiles (see page 102)	
Double was als 41:	l limit	F1:15	Constant flow temperature 20 °C	
Party mode tir		F0.0	No time that for a set we state	
F2:8	Time limit for party mode or external operating program changeover via pushbutton: 8 h (only for weather-compensated control units)*1	F2:0 F2:1 to F2:12	No time limit for party mode*1 Time limit adjustable from 1 to 12 h*1	

^{*1} In the "Heating and DHW" program, party mode ends **automatically** when the system changes over to operation at standard room temperature.



Code 1

Coding in the delivered condition		Possible change		
Pump control	in "Only DHW"			
F6:25	In "Only DHW" operating mode, the circulation pump in the heating circuit connection set is constantly on (only for constant temperature	F6:0	In the "Only DHW" operating mode, the circulation pump in the heating circuit connection set is constantly off	
	control units)	F6:1 to F6:24	In the "Only DHW" operating mode, the circulation pump in the heating circuit connection set is started 1 to 24 times per day for 10 min each time.	
Pump control	in "Standby mode"			
F7:25	In "Standby mode", the circulation pump in the heating circuit connection set is constantly on (only for	c- pump in the heating c	In "Standby mode", the circulation pump in the heating circuit connection set is constantly off	
	constant temperature control units)	F7:1 to F7:24	In "Standby mode", the circulation pump in the heating circuit connection set is started 1 to 24 times per day for 10 min each time.	
Start temperat	ure raising			
F8:-5	Temperature limit for terminating reduced mode -5 °C; see example on page 104. Observe setting for coding address "A3". (Only for weather-compensated control units)	F8:+10 to F8:-60	Temperature limit adjustable from +10 to -60 °C	
		F8:-61	Function disabled	
End temperatu	ure raising			
F9:-14	Temperature limit for raising reduced set room temp14 °C; see example on page 104. (only for weather-compensated control units)	F9:+10 to F9:-60	Temperature limit for raising the set room temperature to the value selected for standard mode adjustable from +10 to -60 °C	
Set flow temper	erature increase			
FA:20	The set boiler water or flow temperature is raised by 20 % when changing from operation with reduced room temperature to operation with standard room temperature. See example on page 104 (only for weather-compensated control units).	FA:0 to FA:50	Temperature rise adjustable from 0 to 50 %	
Duration set fl	ow temperature increase			
Fb:60	Duration for raising the set boiler water temperature or set flow temperature (see coding address "FA") 60 min. See example on page 104 (only for weather-compensated control units).	Fb:0 to Fb:240	Duration adjustable from 0 to 240 min	

Calling up coding level 2

- All codes are accessible in coding level 2.
- Codes that are not assigned due to the heating system equipment level or the setting of other codes are not displayed.
- The heating circuit without mixer is designated "Heating circuit 1" and the heating circuits with mixer as "Heating circuit 2" or "Heating circuit 3". If the heating circuits were given individual designations, the selected designation and "HC1", "HC2" or "HC3" appear instead.

The codes are divided into groups

Weather-compensated control unit

- "General"
- "Boiler"
- "DHW"
- "Solar"
- "Heating circuit 1/2/3"
- "All codes std device"

In this group, all coding addresses (except the coding addresses from the **"Solar"** group) are displayed in ascending order.

"Standard setting"

Constant temperature control unit

- 1: "General"
- 2: "Boiler"
- 3: "DHW"
- 4: "Solar"
- 5: "Heating circuit 1"
- 6: "All codes std device" In this group, all coding addresses are displayed in ascending order.

7: "Standard setting"

Calling up code 2

Weather-compensated control unit

- 1. Press **OK** and **\equiv** simultaneously for approx. 4 s.
- 2. Press **OK** and **⇒** simultaneously for approx. 4 s.

3. "Coding level 2"

- 4. Select the group of required coding addresses.
- **5.** Select the coding address.
- Set the value according to the following tables and confirm with OK.

Constant temperature control unit

- 1. Press **OK** and **\equiv** simultaneously for approx. 4 s.
- 2. Press **OK** and **S** simultaneously for approx. 4 s.
- **3.** Select "②" with ▶ for coding level 2 and confirm with **OK**.
- **4.** "I" flashes on the display for the coding addresses in group 1.
- Select the group of the required coding address with ▲/▼ and confirm with OK.
- 6. Select coding address with ▲/▼.
- Set value according to the following tables with ▲/▼ and confirm with OK.

Resetting all codes to their delivered condition

Weather-compensated control unit

Select "Standard setting".

Note

This also resets the codes at coding level 1.

Constant temperature control unit

Select "7" with ▶ and confirm with **OK**. When "♣" flashes, confirm with **OK**.

Note

This also resets the codes at coding level 1.

General/group "1"

Select "General" for weather-compensated control units (see page 57).

Select "1" for constant temperature control units (see page 57).

Coding in the delivered condition		Possible change	
00:1	System version 1: One heating circuit without mixer A1 (heating circuit 1), without DHW	00:2 to 00:10	For system schemes, see the following table:
	heating		

Value, ad- dress 00:	System ver- sion	Description
2	1	One heating circuit without mixer A1 (heating circuit 1), with DHW heating (code is set automatically)
3	2,3	One heating circuit with mixer M2 (heating circuit 2), without DHW heating
4	2,3	One heating circuit with mixer (heating circuit 2), with DHW heating
5	2,3	One heating circuit without mixer A1 (heating circuit 1) and one heating circuit with mixer M2 (heating circuit 2), without DHW heating (code is set automatically)
6	2,3	One heating circuit without mixer A1 (heating circuit 1) and one heating circuit with mixer M2 (heating circuit 2), with DHW heating (code is set automatically)
7	4	One heating circuit with mixer M2 (heating circuit 2) and one heating circuit with mixer M3 (heating circuit 3), without DHW heating
8	4	One heating circuit with mixer M2 (heating circuit 2) and one heating circuit with mixer M3 (heating circuit 3), with DHW heating
9	4	One heating circuit without mixer A1 (heating circuit 1), one heating circuit with mixer M2 (heating circuit 2) and one heating circuit with mixer M3 (heating circuit 3), without DHW heating (code is set automatically)
10	4	One heating circuit without mixer A1 (heating circuit 1), one heating circuit with mixer M2 (heating circuit 2) and one heating circuit with mixer M3 (heating circuit 3), with DHW heating (code is set automatically)

Coding in the	he delivered condition	Possible change	
11:≠9	No access to the coding addresses for the parameters of the combustion controller	11:9	Access to the coding addresses for the parameters of the combustion controller open
25:0	Without outside temperature sensor (for constant temperature control units)	25:1	With outside temperature sensor (automatic recognition)
2A:0	Without wireless outside temperature sensor	2A:1	With wireless outside temperature sensor (automatic recognition)
		2A:2	Wireless outside temperature sensor not used
2d:0	Never adjust		
32:0	Without AM1 extension	32:1	With AM1 extension (automatic recognition)
33:1	Function of output A1 at AM1 extension: heating circuit pump	33:0	Function of output A1: DHW circulation pump
		33:2	Function of output A1: circulation pump for cylinder heating
34:0	Function of output A2 at AM1 extension: DHW circulation pump	34:1	Function of output A2: heating circuit pump
		34:2	Function of output A2: circulation pump for cylinder heating
35:0	Without EA1 extension	35:1	With EA1 extension (automatic recognition)
36:0	Function of output 157 at EA1 extension: fault message	36:1	Note Function of output 157: feed pump Note Function only possible in conjunction with a heating circuit control unit connected via LON.

Coding in th	ne delivered condition	Possible ch	nange
		36:2	Function of output 157: DHW circulation pump
39:2	Function of output 21: circulation pump for cylinder heating	39:0	Function of output [21]: DHW circulation pump
		39:1	Function of output [21]: heating circuit pump
3A:0	Function of input DE1 at EA1 extension: not assigned	3A:1	Function of input DE1: operating program changeover
		3A:2	Function of input DE1: external demand with set flow temperature Set flow temperature setting: coding address 9b Internal circulation pump function: coding address 3F
		3A:3	Function of input DE1: external blocking Function of internal circulation pump: coding address 3E
		3A:4	Function of input DE1: external blocking with fault message input Function of internal circulation pump: coding address 3E
		3A:5	Function of input DE1: fault message input
		3A:6	Function of input DE1: brief operation of the DHW circulation pump (pushbutton function). DHW circulation pump runtime setting: coding address 3d
3b:0	Function of input DE2 at EA1 extension: not assigned	3b:1	Function of input DE2: operating program changeover
		3b:2	Function of input DE2: external demand with set flow temperature Set flow temperature setting: coding address 9b Internal circulation pump function: coding address 3F
		3b:3	Function of input DE2: external blocking Function of internal circulation pump: coding address 3E
		3b:4	Function of input DE2: external blocking with fault message input Function of internal circulation pump: coding address 3E
		3b:5	Function of input DE2: fault message input
		3b:6	Function of input DE2: brief operation of the DHW circulation pump (pushbutton function). DHW circulation pump runtime setting: coding address 3d
3C:0	Function of input DE3 at EA1 extension: not assigned	3C:1	Function of input DE3: operating program changeover



Coding in the delivered condition		Possible change		
		3C:2	Function of input DE3: external demand with set flow temperature Set flow temperature setting: coding address 9b Internal circulation pump function: coding address 3F	
		3C:3	Function of input DE3: external blocking Function of internal circulation pump: coding address 3E	
		3C:4	Function of input DE3: external blocking with fault message input Function of internal circulation pump: coding address 3E	
		3C:5	Function of input DE3: fault message input	
		3C:6	Function of input DE3: brief operation of the DHW circulation pump (pushbutton function). DHW circulation pump runtime setting: coding address 3d	
3d:5	DHW circulation pump runtime for brief operation: 5 min	3d:1 to 3d:60	DHW circulation pump runtime adjustable from 1 to 60 min	
3E:0	Boiler circuit pump stays in control mode at "External blocking" signal.	3E:1	Boiler circuit pump is switched off at "External blocking" signal.	
		3E:2	Boiler circuit pump is switched on at "External blocking" signal.	
3F:0	Boiler circuit pump stays in control mode at "External demand" signal.	3F:1	Boiler circuit pump is switched off at "External demand" signal.	
		3F:2	Boiler circuit pump is switched on at "External demand" signal.	
4b:0	Function of input 96: room temper-	4b:1	External demand	
	ature controller (Vitotrol 100, only for constant temperature control units)	4b:2	External blocking	
51:0	System with low loss header: The boiler circuit pump is always started when there is a heat demand.	51:1	System with low loss header: the boiler circuit pump is only started when there is a heat demand if the burner is running. The circulation pump stops when the run-on time ends.	
		51:2	System with heating water buffer cylinder: the boiler circuit pump is only started when there is a heat demand if the burner is running.	
52:0	Without flow temperature sensor for low loss header	52:1	With flow temperature sensor for low loss header (automatic recognition)	
53:1	Function of terminal 28 of internal extension: DHW circulation pump	53:0	Function of terminal 28: Central fault	
		53:2	Function of terminal 28: External heating circuit pump (heating circuit 1)	

Coding in the	ne delivered condition	Possible cha	ange
		53:3	Function of terminal 28: External circulation pump or diverter valve for cylinder heating
54:0	Without solar thermal system	54:1	With Vitosolic 100 (automatic recognition)
		54:2	With Vitosolic 200 (automatic recognition)
		54:4	With solar control module SM1 with auxiliary function, e.g. central heating backup (automatic recognition)
6E:50	No correction of measured outside temperature	6E:0 to 6E:100	Outside temperature corrected in 0.1 K steps 0 to 49 = -5 K to -0.1 K 51 to 100 = 0.1 K to 5 K
76:0	Without communication module	76:1	With LON communication module (automatic recognition). Only for weather-compensated control units.
		76:2	With cascade communication module (automatic recognition). Only for constant temperature control units.
77:1	LON subscriber number (only for weather-compensated control units)	77:2 to 77:99	LON subscriber number, adjustable from 1 to 99: 1 - 4 = boiler 5 = cascade 10 - 97 = Vitotronic 200-H 98 = Vitogate 99 = Vitocom Note Allocate each number only once.
79:1	With LON communication module: control unit is fault manager (only for weather-compensated control units).	79:0	Control unit is not fault manager
7b:1	With LON communication module: control unit transmits the time (only for weather-compensated control units).	7b:0	No time transmission
7F:1	Detached house (only for weather-compensated control units)	7F:0	Apartment building Holiday program and time program for DHW heating can be set sepa- rately.
80:6	A fault message is issued if a fault	80:0	Immediate fault message
	is present for at least 30 s	80:2 to 80:199	The minimum fault duration until a fault message is issued is adjustable from 10 s to 995 s 1 step ≜ 5 s
81:1	Automatic summer/wintertime changeover	81:0	Manual summer/wintertime change- over
		81:2	Use of the radio clock receiver (automatic recognition)
		81:3	With LON communication module: control unit receives the time



Coding in the delivered condition		Possible change		
82:0	Operation with natural gas	82:1	Operation with LPG (only adjustable if coding address 11:9 has been set)	
88:0	Temperature displayed in °C (Celsius)	88:1	Temperature displayed in °F (Fahrenheit)	
8A:175	Never adjust			
8F:0	Operation enabled in standard menu and extended menu. Note	8F:1	Operation blocked in standard menu and extended menu Emissions test mode can be enabled.	
	The relevant code is only enabled when you exit the service menu.	8F:2	Operation enabled in standard menu, but blocked in extended menu Emissions test mode can be enabled.	
90:128	Time constant for calculating the adjusted outside temperature 21.3 h	90:1 to 90:199	Subject to the set value, the flow temperature is adjusted quickly (low values) or slowly (high values) when the outside temperature changes 1 step \(\text{\$\frac{1}{2}} \) min	
94:0	Without OpenTherm extension	94:1	With OpenTherm extension (automatic recognition)	
95:0	Without Vitocom 100, type GSM communication interface	95:1	With Vitocom 100, type GSM communication interface (automatic recognition)	
97:0	With LON communication module: outside temperature of the sensor connected to the control unit is utilised internally (only for weather-compensated control units)	97:1	Control unit receives outside temperature	
		97:2	Control unit transmits outside temperature to Vitotronic 200-H	
98:1	Viessmann system number In conjunction with monitoring of several systems via Vitocom 300	98:1 to 98:5	System number adjustable from 1 to 5	
99:0	Never adjust.			
9A:0	Never adjust.			
9b:70	Set flow temperature for external demand 70 °C	9b:0 to 9b:127	Set flow temperature for external demand adjustable from 0 to 127 °C (limited by boiler-specific parameters)	
9C:20	Monitoring LON subscribers	9C:0	No monitoring	
	If there is no response from a sub- scriber for 20 min, the values specified in the control unit are used. Only then will a fault mes- sage be issued. (Only for weather- compensated control units)	9C:5 to 9C:60	Time adjustable from 5 to 60 min	
9F:8	Differential temperature 8 K Only in conjunction with heating circuit with mixer (only for weather- compensated control units)	9F:0 to 9F:40	Differential temperature adjustable from 0 to 40 K	

Boiler/group "2"

Select **"Boiler"** for weather-compensated control units (see page 57).

Select "2" for constant temperature control units (see page 57).

Coding in the delivered condition		Possible change	
01:1	Single boiler system (only for constant temperature control units)	01:2	Multi boiler system with Vitotronic 300-K
04:1	Minimum burner pause time subject to the boiler load (specified by coding card)	04:0	Minimum burner pause time set permanently (specified by coding card)
06:	Maximum limit of boiler water temperature, specified in °C by coding card	06:20 to 06:127	Maximum limit of boiler water temperature within the ranges specified by the boiler
07:1	Boiler number in multi boiler systems (only for constant temperature control units)	07:2 to 07:4	Boiler number 2 to 4 in multi boiler systems
08:	Maximum burner heating output in kW, in multi boiler systems	08:0 to 08:199	Maximum burner heating output adjustable in 1 kW increments, from 0 to 199 kW (limited by boiler-specific parameters)
0d:0	Never adjust.		
0E:0	Never adjust.		
13:1	Never adjust.		
14:1	Never adjust.		
15:1	Never adjust.		
21:0	No service interval set (in hours run)	21:1 to 21:100	The number of hours run before the burner should be serviced is adjustable from 100 to 10,000 h One step ≜ 100 h
23:0	No time set for burner service interval	23:1 to 23:24	Interval adjustable from 1 to 24 months
24:0	"Service" not shown on the display	24:1	"Service" shown on the display The address is set automatically and must be reset manually after a serv- ice.
28:0	No burner interval ignition	28:1 to 28:24	Time interval adjustable from 1 to 24 h. The burner is force-started for 30 s at a time (only when operating with LPG).
2E:0	Never adjust.		
2F:0	Venting program/filling program	2F:1	Venting program enabled
	disabled	2F:2	Filling program enabled
30:3	Boiler circuit pump speed-control- led via 0 - 10 V interface	30:0	 Connection of multi stage boiler circuit pump Operation with low loss header (single or multi boiler system)
		30:1	Boiler circuit pump speed-controlled
		30:2	Boiler circuit pump speed-controlled with flow rate



Code 2

Boiler/group "2" (cont.)

Coding in the delivered condition		Possible change	
31:	Set speed of the internal circulation pump when operated as boiler circuit pump in %, specified by coding card	31:0 to 31:100	Set speed adjustable from 0 to 100 %
38:0	Burner control unit status: operational (no fault)	38:≠0	Burner control unit status: fault

DHW/group "3"

Select **"DHW"** for weather-compensated control units (see page 57).

Select "3" for constant temperature control units (see page 57).

Coding in the delivered condition		Possible change	
56:0	Set DHW temperature adjustable from 10 to 60 °C	56:1	Set DHW temperature adjustable from 10 to above 60 °C Note Maximum value subject to coding card Observe the maximum permissible DHW temperature.
58:0	Without auxiliary function for DHW heating	58:10 to 58:60	Entry of a 2nd set DHW temperature Adjustable from 10 to 60 °C (ob- serve coding addresses "56" and "63")
59:0	Cylinder heating: Start point -2.5 K Stop point +2.5 K	59:1 to 59:10	Start point adjustable from 1 to 10 K below set value
5b:0	DHW cylinder directly connected to the boiler	5b:1	DHW cylinder connected down- stream of the low loss header
5E:0	Circulation pump for cylinder heating stays in control mode at "External blocking" signal.	5E:1	Circulation pump for cylinder heating is switched off at "External blocking" signal.
		5E:2	Circulation pump for cylinder heating is switched off at "External blocking" signal.
5F:0	Circulation pump for cylinder heating stays in control mode at "External demand" signal.	5F:1	Circulation pump for cylinder heating is switched off at "External demand" signal.
		5F:2	Circulation pump for cylinder heating is switched on at "External demand" signal.
60:20	During DHW heating, the boiler water temperature is max. 20 K higher than the set DHW temperature.	60:5 to 60:25	The differential between the boiler water temperature and the set DHW temperature is adjustable from 5 to 25 K
62:2	Circulation pump with 2 min run-on	62:0	No circulation pump run-on
	time after cylinder heating	62:1 to 62:15	Run-on time adjustable from 1 to 15 min

DHW/group "3" (cont.)

Coding in the delivered condition		Possible change	
63:0	Without auxiliary function for DHW	63:1	Auxiliary function: 1 x daily
	heating (only for constant tempera- ture control units)	63:2 to 63:14	Every 2 days to every 14 days
		63:15	2 x daily
65:0	Never adjust		
67:40	For solar DHW heating: set DHW temperature 40 °C. Reheating is suppressed above the selected set temperature: boiler only starts as backup if the rise in the DHW temperature is too low.	67:0 to 67:95	Set DHW temperature adjustable from 0 to 95 °C (limited by boiler-specific parameters)
6F:	Max. heating output for DHW heating in %, specified by coding card	6F:0 to 6F:100	Max. heating output for DHW heating adjustable from min. heating output to 100 %
71:0	DHW circulation pump: "ON" according to time program (only for	71:1	"OFF" during DHW heating to set value 1
	weather-compensated control units)	71:2	"ON" during DHW heating to set value 1
72:0	DHW circulation pump: "ON" according to time program (only for	72:1	"OFF" during DHW heating to set value 2
	weather-compensated control units)	72:2	"ON" during DHW heating to set value 2
73:0	DHW circulation pump: "ON" according to time program (only for weather-compensated control	73:1 to 73:6	"ON" from once per hour for 5 min up to 6 times per hour for 5 min dur- ing the time program
	units)	73:7	Permanently "ON"

Solar/group "4"

Select **"Solar"** for weather-compensated control units (see page 57).

Select **"4"** for constant temperature control units (see page 57).

Note

The solar group is only displayed if a solar control module, type SM1, is connected.

Coding in the delivered condition		Possible change	
00:8	Start temperature differential for solar circuit pump 8 K	00:2 to 00:30	Start temperature differential adjustable from 2 to 30 K
01:4	Stop temperature differential for solar circuit pump 4 K	01:1 to 01:29	Stop temperature differential adjustable from 1 to 29 K
02:0	Solar circuit pump not speed-controlled	02:1	Solar circuit pump speed-controlled with wave packet control
		02:2	Solar circuit pump speed-controlled with PWM control
03:10	Temperature differential for the start of speed control 10 K	03:5 to 03:20	Temperature differential adjustable from 5 to 20 K



Coding in the delivered condition		Possible change		
04:4	Controller amplification of speed control 4 %/K	04:1 to 04:10	Controller amplification adjustable from 1 to 10 %/K	
05:10	Min. speed of solar circuit pump 10 % of max. speed	05:2 to 05:100	Min. speed of solar circuit pump is adjustable from 2 to 100 %	
06:75	Max. speed of solar circuit pump 75 % of max. possible speed	06:1 to 06:100	Max. speed of solar circuit pump is adjustable from 1 to 100 %	
07:0	Interval function of solar circuit pump switched off	07:1	Interval function of solar circuit pump switched on To capture the collector temperature more accurately, the solar circuit pump periodically starts for a short duration.	
08:60	Set DHW temperature (maximum cylinder temperature) 60 °C	08:10 to 08:90	Set DHW temperature adjustable from 10 to 90 °C	
09:130	Maximum collector temperature (to protect system components) 130 °C	09:20 to 09:200	Temperature adjustable from 20 to 200 °C	
0A:5	Temperature differential for stagnation time reduction 5 K Reduction in the speed of the solar circuit pump to protect system components and heat transfer medium.	0A:0 0A:1 to 0A:40	Stagnation time reduction not active Temperature differential adjustable from 1 to 40 K	
0b:0	Frost protection function for solar circuit switched off	0b:1	Frost protection function for solar circuit switched on (not required with Viessmann heat transfer medium).	
0C:1	Delta T monitoring switched on No flow rate captured in the solar circuit, or flow rate too low.	0C:0	Delta T monitoring switched off	
0d:1	Night-time DHW circulation monitoring switched on Unintentional flow in the solar circuit is captured (e.g. at night).	0d:0	Night-time DHW circulation monitoring switched off	
0E:1	Heat statement in conjunction with	0E:2	Never adjust	
	Viessmann heat transfer medium	0E:0	No heat statement	
0F:70	Solar circuit flow rate at maximum pump speed 7 l/min	0F:1 to 0F:255	Flow rate adjustable from 0.1 to 25.5 l/min 1 step ≙ 0.1 l/min	
10:0	Target temperature control switched off (see coding address "11").	10:1	Target temperature control switched on	
11:50	Set solar DHW temperature 50 °C.	11:10 to 11:90	The set solar DHW temperature is adjustable from 10 to 90 °C.	

Coding in th	e delivered condition	Possible change	
	 Target temperature control switched on (code "10:1"): temperature at which the solar heated water is to be stratified into the DHW cylinder. If code "20:9" (heating of two DHW cylinders) is set: When one DHW cylinder reaches its set DHW temperature, the second DHW cylinder is heated. 		
12:10	Minimum collector temperature	12:0	No minimum limit enabled
	(minimum start temperature for the solar circuit pump) 10 °C.	12:1 to 12:90	Minimum collector temperature adjustable from 1 to 90 °C
20:0	No extended control function ena-	20:1	Auxiliary function for DHW heating
	bled	20:2	Differential temperature control 2
		20:3	Differential temperature control 2 and auxiliary function
		20:4	Differential temperature control 2 for central heating backup
		20:5	Thermostat function
		20:6	Thermostat function and auxiliary function
		20:7	Solar heating via external heat exchanger without additional temperature sensor
		20:8	Solar heating via external heat exchanger with additional temperature sensor
		20:9	Solar heating of 2 DHW cylinders
22:8	Start temperature differential for central heating backup 8 K (code "20:4" must be set)	22:2 to 22:30	Start temperature differential adjustable from 2 to 30 K
23:4	Stop temperature differential for central heating backup 4 K (code "20:4" must be set)	23:2 to 23:30	Stop temperature differential adjustable from 1 to 29 K
24:40	Start temperature for thermostat function 40 °C (code "20:5" or "20:6" must be set)	24:0 to 24:100	Start temperature for thermostat function adjustable from 0 to 100 K
25:50	Stop temperature for thermostat function 50 °C (code "20:5" or "20:6" must be set)	25:0 to 25:100	Stop temperature for thermostat function adjustable from 0 to 100 K
26:1	Priority for DHW cylinder 1 with cyclical heating	26:0	Priority for DHW cylinder 1 without cyclical heating
	(code "20:9" must be set)	26:2	Priority for DHW cylinder 2 without cyclical heating
		26:3	Priority for DHW cylinder 2 with cyclical heating
		26:4	Cyclical heating without priority for either DHW cylinder
27:15	Cyclical heating time 15 min.	27:5 to	The cyclical heating time is adjustable from 5 to 60 min



Coding in the delivered condition		Possible change	
	Once the DHW cylinder with priority is heated up, the DHW cylinder without priority is heated for a maximum duration equal to the set cyclical heating time.	27:60	
28:3	Cyclical pause time 3 min. After the set cyclical heating time for the DHW cylinder without priority has expired, the rise in collector temperature is captured during the cyclical pause time.	28:1 to 28:60	Cyclical pause time adjustable from 1 to 60 min

Heating circuit 1, heating circuit 2, heating circuit 3/group "5"

Select "Heating circuit ..." for weather-compensated control units (see page 57).

Select "5" for constant temperature control units (see page 57).

Coding

Coding in the delivered condition		Possible change	
A0:0	Without remote control	A0:1	With Vitotrol 200-A/200-RF (automatic recognition)
		A0:2	With Vitotrol 300-A or Vitocomfort 200 (automatic recognition)
A1:0	All possible settings at the remote control can be accessed	A1:1	Only party mode can be set at the remote control (only for Vitotrol 200-A/200-RF)
A2:2	Cylinder priority applicable to heating circuit pump and mixer	A2:0	Without cylinder priority applicable to heating circuit pump and mixer
		A2:1	Cylinder priority only applicable to mixer
		A2:3 to A2:15	Reduced priority applicable to mixer The heating circuit receives a re- duced amount of heat
A3:2	Outside temperature below 1 °C: Heating circuit pump "ON" Outside temperature above 3 °C: Heating circuit pump "OFF"	A3:-9 to A3:15	Heating circuit pump "ON/OFF" (see the following table)

Please note

With settings below 1 °C there is a risk that pipes outside the thermal envelope of the building could freeze up.

Standby mode in particular should be taken into consideration, e.g. during holidays.

Parameter	Heating circuit pump		
address A3:	"ON"	"OFF"	
-9	-10 °C	-8 °C	
-8	-9 °C	-7 °C	
-7	-8 °C	-6 °C	
-6	-7 °C	-5 °C	
-5	-6 °C	-4 °C	

Parameter	Heating circuit pump	leating circuit pump		
address A3:	"ON"	"OFF"		
-4	-5 °C	-3 °C		
-3	-4 °C	-2 °C		
-2	-3 °C	-1 °C		
-1	-2 °C	0 °C		
0	-1 °C	1 °C		
1	0 °C	2 °C		
2	1 °C	3 °C		
to	to	to		
15	14 °C	16 °C		

Coding in the delivered condition		Possible change	
A4:0	With frost protection (only for weather-compensated control units)	A4:1	No frost protection; this setting is only possible if code "A3:-9" has been selected.
			Note "Important", observe for code "A3".
A5:5	With heating circuit pump logic function (economy mode): heating	A5:0	Without heating circuit pump logic function
	circuit pump "OFF" when the outside temperature (OT) is 1 K higher than the set room temperature (RT _{set}) OT > RT _{set} + 1 K (only for weather-compensated control units)	A5:1 to A5:15	With heating circuit pump logic function: heating circuit pump "OFF" (see the following table)

Parameter address A5:	With heating circuit pump logic function: heating circuit pump "OFF"
1	OT > RT _{set} + 5 K
2	OT > RT _{set} + 4 K
3	OT > RT _{set} + 3 K
4	OT > RT _{set} + 2 K
5	OT > RT _{set} + 1 K
6	OT > RT _{set}
7	OT > RT _{set} - 1 K
to	
15	OT > RT _{set} - 9 K

Coding in the delivered condition		Possible change	
A6:36	Extended economy mode disa-	A6:5	Extended economy mode enabled
	bled (only for weather-compensa-	to	
	ted control units)	A6:35	



Coding in the	delivered condition	Possible change	
			At a variable value, adjustable between 5 and 35 °C plus 1 °C, the burner and heating circuit pump are stopped and the mixer is closed. The basis for this is the adjusted outside temperature. This is composed of the actual outside temperature and a time constant that takes account of the way an average building cools down.
A7:0	Without mixer economy function Only for weather-compensated control units and heating circuits with mixer	A7:1	With mixer economy function (extended heating circuit pump logic): Heating circuit pump also "OFF": If the mixer has been trying to close for longer than 20 min. Heating circuit pump "ON": If the mixer changes to control function If there is a risk of frost
A8:1	Heating circuit with mixer creates a demand for the boiler circuit pump (only for weather-compensated control units)	A8:0	Heating circuit with mixer creates no demand for the boiler circuit pump
A9:7	With pump idle time: heating circuit	A9:0	Without pump idle time
	pump "OFF" if the set value is altered through a change in operating mode or through a change in the set room temperature (only for weather-compensated control units)	A9:1 to A9:15	With pump idle time, adjustable from 1 to 15. The higher the value, the longer the pump idle time.
b0:0	With remote control: heating mode/ reduced mode: weather-compen- sated (only for weather-compensa- ted control units; only change the	b0:1	Heating mode: weather-compensated Reduced mode: with room temperature hook-up
	code for the heating circuit with mixer)	b0:2	Heating mode: with room temperature hook-up Reduced mode: weather-compensated
		b0:3	Heating mode/reduced mode: with room temperature hook-up
b2:8	With remote control and for the	b2:0	Without room influence
	heating circuit, operation with room temperature hook-up must be pro- grammed: room influence factor 8 (only for weather-compensated control units; only change the code for the heating circuit with mixer)	b2:1 to b2:64	Room influence factor adjustable from 1 to 64. The higher the value, the greater the room influence.
b5:0	With remote control: no room temperature-dependent heating circuit pump logic function (only for weather-compensated control units; only change the code for the heating circuit with mixer)	b5:1 to b5:8	For heating circuit pump logic function, see the following table:

Parameter address	With heating circuit pump logic function:		
b5:	Heating circuit pump "OFF"	Heating circuit pump "ON"	
1	RT _{actual} > RT _{set} + 5 K	RT _{actual} < RT _{set} + 4 K	
2	RT _{actual} > RT _{set} + 4 K	RT _{actual} < RT _{set} + 3 K	
3	RT _{actual} > RT _{set} + 3 K	RT _{actual} < RT _{set} + 2 K	
4	RT _{actual} > RT _{set} + 2 K	RT _{actual} < RT _{set} + 1 K	
5	RT _{actual} > RT _{set} + 1 K	RT _{actual} < RT _{set}	
6	RT _{actual} > RT _{set}	RT _{actual} < RT _{set} - 1 K	
7	RT _{actual} > RT _{set} - 1 K	RT _{actual} < RT _{set} - 2 K	
8	RT _{actual} > RT _{set} - 2 K	RT _{actual} < RT _{set} - 3 K	

Coding in the delivered condition		Possible change	
C5:20	Electronic minimum flow tempera- ture limit 20 °C (only for weather- compensated control units)	C5:1 to C5:127	Minimum limit adjustable from 1 to 127 °C (limited by boiler-specific parameters)
C6:74	Electronic maximum flow tempera- ture limit 74 °C (only for weather- compensated control units)	C6:10 to C6:127	Maximum limit adjustable from 10 to 127 °C (limited by boiler-specific parameters)
d3:14	Heating curve slope = 1.4	d3:2 to d3:35	Heating curve slope adjustable from 0.2 to 3.5 (see page 43)
d4:0	Heating curve level = 0	d4:-13 to d4:40	Heating curve level adjustable from –13 to 40 (see page 43)
d5:0	The external operating program changeover switches the operating program to "Constant operation with reduced room temperature" or "Standby mode" (only for weather-compensated control units)	d5:1	The external operating program changeover switches to "Continuous operation at standard room temperature" (subject to coding addresses 3A, 3b and 3C).
d6:0	Heating circuit pump stays in control mode at "External blocking" signal.	d6:1	Heating circuit pump is switched off at "External blocking" signal (subject to coding addresses 3A, 3b and 3C).
		d6:2	Heating circuit pump is switched on at "External blocking" signal (subject to coding addresses 3A, 3b and 3C).
d7:0	Heating circuit pump stays in control mode at "External demand" signal.	d7:1	Heating circuit pump is switched off at "External demand" signal (subject to coding addresses 3A, 3b and 3C).
		d7:2	Heating circuit pump is switched on at "External demand" signal (subject to coding addresses 3A, 3b and 3C).
d8:0	No operating program changeover via EA1 extension	d8:1	Operating program changeover via input DE1 at EA1 extension
		d8:2	Operating program changeover via input DE2 at EA1 extension
		d8:3	Operating program changeover via input DE3 at EA1 extension
E1:1	Never adjust.		



Code 2

Coding in the	delivered condition	Possible change	
E2:50	With remote control: no display correction for the actual room temperature (only for weather-compensated control units)	E2:0 to E2:49 E2:51 to E2:99	Display correction –5 K to Display correction –0.1 K Display correction +0.1 K to
E5:0	Never adjust.	E2.99	Display correction +4.9 K
E6:	Maximum speed of the variable speed heating circuit pump in % of the max. speed in standard mode. Value is specified by boiler-specific parameters (only for weather-compensated control units).	E6:0 to E6:100	Maximum speed adjustable from 0 to 100 %
E7:30	Minimum speed of the variable speed heating circuit pump: 30 % of the max. speed (only for weather-compensated control units)	E7:0 to E7:100	Minimum speed adjustable from 0 to 100 % of maximum speed
F1:0	Screed drying disabled (only for weather-compensated control units)	F1:1 to F1:6	Screed drying can be set with 6 adjustable temperature/time profiles (see page 102)
		F1:15	Constant flow temperature 20 °C
F2:8	Time limit for party mode or external operating mode changeover via pushbutton: 8 h (only for weather-compensated control units)*1	F2:0 F2:1 to F2:12	No time limit for party mode*1 Time limit adjustable from 1 to 12 h*1
F5:12	Run-on time of the boiler circuit	F5:0	No boiler circuit pump run-on time
pump in hea	pump in heating mode: 12 min (only for constant temperature control units)	F5:1 to F5:20	Run-on time of the boiler circuit pump adjustable from 1 to 20 min
circ for	In "Only DHW" mode, the boiler circuit pump is constantly on (only	F6:0	In "Only DHW" mode, the boiler circuit pump is constantly off.
	for constant temperature control units).	F6:1 to F6:24	In "Only DHW" mode, the boiler circuit pump is started 1 to 24 times per day for 10 min each time.
F7:25	In "Standby mode", the boiler circuit pump is constantly on (only for	F7:0	In "Standby mode", the boiler circuit pump is constantly off
	constant temperature control units).	F7:1 to F7:24	In "Standby mode", the boiler circuit pump is started 1 to 24 times per day for 10 min each time.
F8:-5	Temperature limit for terminating reduced mode -5 °C; see example on page 104. Observe setting for coding address	F8:+10 to F8:-60 F8:-61	Temperature limit adjustable from +10 to -60 °C Function disabled
	"A3". (Only for weather-compensated control units)		
F9:-14	Temperature limit for raising reduced set room temp14 °C; see example on page 104. (only for weather-compensated control units)	F9:+10 to F9:-60	Temperature limit for raising the set room temperature to the value selected for standard mode adjustable from +10 to -60 °C

^{*1} In the "Heating and DHW" program, party mode ends **automatically** when the system changes over to operation at standard room temperature.

Heating circuit 1, heating circuit 2, heating... (cont.)

Coding in the	delivered condition	Possible change		
FA:20	The set boiler water or flow temperature is raised by 20 % when changing from operation with reduced room temperature to operation with standard room temperature. See example on page 104 (only for weather-compensated control units).	FA:0 to FA:50	Temperature rise adjustable from 0 to 50 %	
Fb:60	Duration for raising the set boiler water temperature or set flow temperature (see coding address "FA") 60 min. See example on page 104 (only for weather-compensated control units).	Fb:0 to Fb:240	Duration adjustable from 0 to 240 min	

Service level

Weather-compensated control unit

Calling up the service menu:

- 1. Press **OK** and **\equiv** simultaneously for approx. 4 s.
- 2. Select required menu. See following diagram.

To exit the service level:

1. Select "Terminate service?".

- 2. Select "Yes".
- 3. Confirm with OK.

Note

The system exits the service level automatically after 30 min.

Constant temperature control unit

Calling up the service level:

- Press OK and simultaneously for approx. 4 s.
 ">>" flashes on the display.
- 2. Select required function. See following pages.

Leaving the service level

1. Select "Serv" ⑦ with ▶.

- Confirm with OK. "OFF" flashes.
- 3. Confirm with OK.

Note

The system exits the service level automatically after 30 min.

Overview of service menu for weather-compensated mode

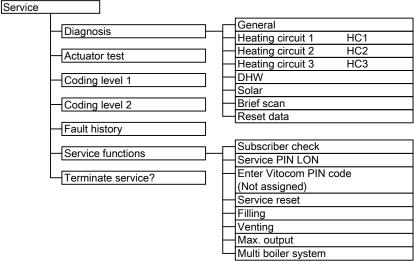


Fig. 38

Note

Do **not** adjust menu item **"Multi-boiler system"**. The menu item turns a weather-compensated control unit into a constant temperature control unit.

Diagnosis

Operating data

Weather-compensated control unit

Checking operating data

- Operating data can be called up in 6 areas. See
 "Diagnosis" in the service menu overview.
- Operating data on heating circuits with mixer and solar can only be called up if the components are installed in the system.
- For further information on operating data, see chapter "Brief scan".

Calling up operating data

- 1. Press **OK** and **\equiv** simultaneously for approx. 4 s.
- 2. "Diagnosis"
- 3. Select the required group, e.g. "General".

Note

If a called up sensor is faulty, "---" appears on the display.

Resetting operating data

Saved operating data (e.g. hours run) can be reset to

The value "Adjusted outside temp" is reset to the actual value.

- 1. Press **OK** and **\equiv** simultaneously for approx. 4 s.
- 2. "Diagnosis"
- 3. "Reset data"

Select required value (e.g. "Burner starts") or "All details".

Constant temperature control unit

Checking operating data

- Operating data can be called up in the "i" menu.
- For further information on operating data, see chapter "Brief scan".

Calling up operating data

- 1. Press **OK** and **\equiv** simultaneously for approx. 4 s.
- 2. Select the required information with **△**/**▼**.

Note

If a called up sensor is faulty, "---" appears on the display.

Resetting operating data

Saved operating data (e.g. hours run) can be reset to "0".

- 1. Press **OK** and **\equiv** simultaneously for approx. 4 s.
- 2. Select the required information with **△**/▼.
- 3. Confirm with OK, "\" flashes.
- 4. Confirm with **OK**, the value is reset.

Brief scan

In the brief scan, you can call up temperatures, software versions and connected components, for example.

Weather-compensated control unit

- 1. Press **OK** and **\equiv** simultaneously for approx. 4 s.
- 2. "Diagnosis"
- 3. "Brief scan".

4. Press OK.

The display shows 9 rows with 6 fields each.



Fig. 39

Diagnosis (cont.)

For an explanation of the relevant values in the individual rows and fields, see the following table:

Row (brief scan)	Field						
	1	2	3	4	5	6	
1:	System schem	e 01 to 10	Software versi Control unit	Software version Control unit		on unit	
2:	0	0	Appliance vers	sion	Appliance ID 0	CU-ID	
3:	0		Number of KM ers	I-BUS subscrib-	Software versi module SM1	on, solar control	
4:	Software version Burner control		Type Burner control	unit	Version, burne	r control unit	
5:	Internal details for calibration			0	Software version, AM1 extension	Software version, EA1 extension	
6:	0	0	0	Switching state, flow sensor 1: flow rate too low or not present	0	0	
7:	LON Subnet addres ber	Subnet address/system num-		LON Node address		0	
8:	LON SBVT config- uration	LON Software ver- sion, commu- nication cop- rocessor	LON Neuron chip software version		Number of LO	N subscribers	
9:	Heating circui mixer)	t A1 (without	Heating circu mixer)	it M2 (with	Heating circuit M3 (with mixer)		
	Remote control 0: without 1: Vitotrol 200-A/ 200-RF 2: Vitotrol 300-A	Software version, remote control	Remote control 0: without 1: Vitotrol 200-A/ 200-RF 2: Vitotrol 300-A	Software version, remote control	Remote control 0: without 1: Vitotrol 200-A/ 200-RF 2: Vitotrol 300-A	Software version, remote control	
10:	0	0	0	0	0	0	
11:	0	0	Software version Mixer extension, heating circuit M2 0: no mixer extension	0	Software version Mixer extension, heating circuit M3 0: no mixer extension	0	

Constant temperature control unit

- Press OK and ≡ simultaneously for approx. 4 s.
 ">" flashes on the display.
- 2. Confirm with OK.

- Select the required scan with ▲/▼. For example, "b" for "Max. output" (see following table):
- 4. Confirm selected scan with **OK**.

Diagnosis (cont.)

For explanations of individual scans, see the following table:

Brief scan			Display			
ī I	8			8]]	
0		System scheme 1 to 2	Software version Control unit		Software version Programming uni	
1			Adjusted outside	temperature		
3			Set boiler water to			
4			Common demand			
5			Set cylinder temp	<u>'</u>		
6		Number of KM-BU		Number of LON s	uhecrihere	
7	SNVT configuration 0: auto 1: tool	Software version Communication co		Software version LON communicat		
8		Subnet address/sy	stem number	Node address		
9		Burner control unit	type	Appliance type		
A		Switching state, flow switch 1: flow rate too low or not present	Max. heating output in %			
b		Coding card (hexa	xadecimal)			
С		Flow rate (specified	d in l/h)			
С		Version Appliance		Version Burner control unit		
d				0	0	
E 1	Software version Solar control module, type SM1	Software version Burner control unit			Software version LON cascade communication module	
F 1	Code 53 setting	Internal details for	calibration			
			AM1 extension			
F ②	Software ver- sion	Output A1 configuration (value corresponds to code 33 setting)	Output A1 switching state 0: OFF 1: ON	Output A2 configuration (value corresponds to code 34 setting)	Output A2 switching state 0: OFF 1: ON	
			EA1 extension			
F ③	Output 157 configuration (value corresponds to setting of code 36 in group 1	Output 157 switching state 0: OFF 1: ON	Input DE1 switching state 0: open 1: closed	Input DE2 switching state 0: open 1: closed	Input DE3 switching state 0: open 1: closed	
	"General")			External hook-up 0 - 10 V		
F	"General") Software ver-			0 - 10 V		
F (4)			External hook-up Display in %	0 - 10 V		
	Software ver-	Sola				



Diagnosis and service scans

Diagnosis (cont.)

Brief scan	Display					
) i		
F 6	Night-time DHW circulation, solar thermal system (number)					
F 7	Differential tempor	Differential temperature monitoring				
F (8)				Solar central heating backup 0: disabled 1: enabled	Output 22 switching state 0: OFF 1: ON	
	OpenTherm extension (if installed)					
F 9	Software ver- sion	DHW heating status	External hook-up Display in %	0 - 10 V		

Checking outputs (relay test)

Weather-compensated control unit

Press OK and simultaneously for approx. 4 s.
 "Actuator test"

The following relay outputs can be controlled subject to system design:

Display		Explanation
All actuators	Off	All actuators are off
Base load	On	Burner operated at minimum output; circulation pump is started
Full load	On	Burner operated at maximum output; circulation pump is started
Output, internal	On	Output 20 active (boiler circuit pump)
Output 21/28	On	Output 21 active (circulation pump for cylinder heating)
Heating circ pump HC2	On	Heating circuit pump output enabled (extension to heating circuit with mixer)
Mixer HC2	Open	"Mixer open" output enabled (extension to heating circuit with mixer)
Mixer HC2	Close	"Mixer close" output enabled (extension to heating circuit with mixer)
Heating circ pump HC3	On	Heating circuit pump output enabled (extension to heating circuit with mixer)
Mixer HC3	Open	"Mixer open" output enabled (extension to heating circuit with mixer)
Mixer HC3	Close	"Mixer close" output enabled (extension to heating circuit with mixer)
Outp. int. exten. H1	On	Output at internal extension enabled
AM1 output 1	On	Output A1 at extension AM1 enabled
AM1 output 2	On	Output A2 at extension AM1 enabled
EA1 output 1	On	Contact P - S at plug 157 of extension EA1 closed
Solar circuit pump	On	Solar circuit pump output 24 on solar control module SM1 active
Solar circ pmp min	On	Solar circuit pump output on solar control module SM1 switched to minimum speed
Solar circ pmp max	On	Solar circuit pump output on solar control module SM1 switched to maximum speed
SM1 output 22	On	Output 22 on solar control module SM1 active

Constant temperature control unit

Press OK and ≡ simultaneously for approx. 4 s.
 Select "□ with and confirm with OK.
 "> and confirm with OK.

Checking outputs (relay test) (cont.)

- 3. Select required actuator (output) with ▲/▼ (see following table):
- **4.** Confirm selected actuator with **OK**. The display shows the number for the activated actuator and "**ON**".

The following actuators (relay outputs) can be controlled subject to system design:


Display	Explanation
0	All actuators are off
1	Burner operated at minimum output; circulation pump is started
2	Burner operated at maximum output; circulation pump is started
3	Output 20 active (boiler circuit pump)
10	Internal extension output enabled
15	Solar circuit pump output 24 on solar control module SM1 active
16	Solar circuit pump output on solar control module SM1 switched to minimum speed
17	Solar circuit pump output on solar control module SM1 switched to maximum speed
18	Output 22 on solar control module SM1 active
19	Contact P - S at plug 157 of extension EA1 closed
20	Output A1 at extension AM1 enabled
21	Output A2 at extension AM1 enabled
22	Output 21 active (circulation pump for cylinder heating)

Troubleshooting

Fault display

Weather-compensated control unit

In the event of a fault, red fault indicator (A) flashes. "A" flashes on the display and "Fault" is shown.

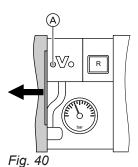

Press **OK** to display the fault code.

For an explanation of the fault code, see the following pages.

For some faults, the type of fault is also displayed in plain text.

Acknowledging a fault

Follow the instructions on the display.

Note

- The fault message is transferred to the standard menu.
- Any fault message facility connected will be switched off.
- If an acknowledged fault is not remedied, the fault message will be redisplayed the following day and the fault message facility restarted.

Calling up acknowledged faults

Select **"Fault"** in the standard menu. Current faults will be listed.

Calling up fault codes from the fault memory (fault history)

The 10 most recent faults (including those remedied) are saved and can be called up. Faults are sorted by date.


- 1. Press **OK** and **\equiv** simultaneously for approx. 4 s.
- 2. "Fault history"
- 3. "Display?"

Deleting the fault history

- 1. Press **OK** and **\equiv** simultaneously for approx. 4 s.
- 2. "Fault history"
- 3. "Delete?"

Constant temperature control unit

In the event of a fault, red fault indicator (A) flashes. The 2-digit fault code and (subject to the type of fault)
"\(\Delta\)" or "\(\Delta\)" flash on the programming unit display.

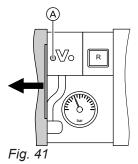

Other current faults can be displayed with **△**/▼. For an explanation of the fault codes, see the following pages.



Fig. 42 Example: Fault message "50"

Acknowledging a fault

Press **OK**. The default display reappears on the display screen.

Any fault message facility connected will be switched off.

Fault display (cont.)

If an acknowledged fault is not remedied, the fault message will be redisplayed the following day and the fault message facility restarted.

Calling up acknowledged faults

Hold down **OK** for approx. 4 s.

The 10 most recent faults (including those remedied) are saved and can be called up.

Calling up fault codes from the fault memory (fault history)

The 10 most recent faults (including those remedied) are saved and can be called up.

Faults are sorted by date.

- 1. Press **OK** and **\equiv** simultaneously for approx. 4 s.
- 2. Select "⚠" and enable fault history with **OK**.
- 3. Select fault messages with ▲/▼.

Deleting the fault history

While the list is displayed, press **OK** until **♣** flashes. Confirm with **OK**.

Fault codes

Fault code displayed	Const.	Weather- comp.	System characteristics	Cause	Measures
10	X	X	Regulates as if the outside temperature were 0 °C.	Short circuit, out- side temperature sensor	Check outside tempera- ture sensor (see page 90)
18	X	X	Regulates as if the outside temperature were 0 °C.	Lead break, out- side temperature sensor	Check outside tempera- ture sensor (see page 90)
19	X	X	Regulates as if the outside temperature were 0 °C.	Communication interruption, outside temperature sensor RF: Outside temperature sensor RF, KM-BUS to wireless base station, wireless base station or wireless repeater faulty or defective.	Check wireless connection: Place outside temperature sensor RF and wireless repeater close to the boiler. Check KM-BUS to wireless base station. Log off outside temperature sensor and wireless repeater, then log them on again. Wireless base station Replace outside temperature sensor RF. Replace wireless repeater. Replace wireless base station.
20	X	X	Regulates without flow temperature sensor (low loss header)	Short circuit, system flow temperature sensor	Check low loss header sensor (see page 91)
28	Х	X	Regulates without flow temperature sensor (low loss header)	Lead break, system flow temperature sensor	Check low loss header sensor (see page 91). If no low loss header sensor is connected, set code 52:0.



Fault code displayed	Const.	Weather- comp.	System characteristics	Cause	Measures
30	X	X	Burner blocked	Short circuit, boiler water temperature sensor	Check boiler water temperature sensors (see page 91).
38	X	X	Burner blocked	Lead break, boiler water temperature sensor	Check boiler water temperature sensors (see page 91).
40		X	Mixer is being closed.	Short circuit, flow temperature sen- sor, heating circuit 2 (with mixer)	Check flow temperature sensor (see page 94)
44		Х	Mixer is being closed.	Short circuit, flow temperature sensor, heating circuit 3 (with mixer)	Check flow temperature sensor (see page 94).
48		X	Mixer is being closed.	Lead break, flow temperature sen- sor, heating circuit 2 (with mixer)	Check flow temperature sensor (see page 94).
4C		Х	Mixer is being closed.	Lead break, flow temperature sen- sor, heating circuit 3 (with mixer)	Check flow temperature sensor (see page 94).
50	X	Х	No DHW heating by the boiler	Short circuit, cylinder temperature sensor	Check cylinder temperature sensor (see page 91).
58	X	X	No DHW heating by the boiler	Lead break, cylin- der temperature sensor	Check cylinder temperature sensor (see page 91).
90	X	X	Control mode	Short circuit, temperature sensor 7	Check sensor 7 on solar control module.
91	Х	Х	Control mode	Short circuit, temperature sensor 10	Check sensor 10 on solar control module.
92	X	Х	No solar DHW heating	Short circuit, collector temperature sensor	Check temperature sensor 6 on solar control module or sensor on the Vitosolic.
93	X	X	Control mode	Short circuit, col- lector return tem- perature sensor	Check temperature sensor at terminal S3 on the Vitosolic.
94	X	Х	No solar DHW heat- ing	Short circuit, cylinder temperature sensor	Check temperature sensor 5 on solar control module or sensor on the Vitosolic.
98	Х	Х	Control mode	Lead break, temperature sensor 7	Check sensor 7 on solar control module.
99	Х	Х	Control mode	Lead break, temperature sensor 10	Check sensor 10 on solar control module.
9A	Х	X	No solar DHW heat- ing	Lead break, collector temperature sensor	Check temperature sensor 6 on solar control module or sensor on the Vitosolic.

Fault code displayed	Const.	Weather- comp.	System characteristics	Cause	Measures
9b	X	X	Control mode	Lead break, collector return temperature sensor	Check temperature sensor at terminal S3 on the Vitosolic.
9C	X	X	No solar DHW heat- ing	Lead break, cylinder temperature sensor	Check temperature sensor 5 on solar control module or sensor on the Vitosolic.
9E	X	Х	Control mode	No flow or flow rate too low in the solar circuit, or temperature limiter has responded.	Check solar circuit pump and solar circuit. Acknowl- edge fault message.
9F	Х	X	Control mode	Solar control mod- ule or Vitosolic fault	Replace solar control module or Vitosolic.
A3		X	Burner blocked	Flue gas temperature sensor incorrectly positioned	Fit flue gas temperature sensor correctly (see page 92).
A4		Х	Control mode	Max. system pressure exceeded	Check system pressure: max. 3 bar (0.3 MPa) Check the function and sizing of the diaphragm expansion vessel. Vent the heating system.
A7		Х	Control mode as per delivered condition	Programming unit faulty	Replace programming unit.
b0	X	X	Burner blocked	Short circuit, flue gas temperature sensor	Check flue gas temperature sensor.
b1	X	X	Control mode as per delivered condition	Communication error, programming unit	Check connections and replace programming unit if necessary.
b5	X	Х	Control mode as per delivered condition	Internal fault	Replace control unit.
b7	X	Х	Burner blocked	Fault, coding card	Plug in coding card or replace if faulty.
b8	X	X	Burner blocked	Lead break, flue gas temperature sensor	Check flue gas temperature sensor.
bA		Х	Mixer regulates to 20 °C flow temperature.	Communication error, extension kit for heating circuit 2 (with mixer)	Check extension kit connections and code.
bb		X	Mixer regulates to 20 °C flow temperature.	Communication error, extension kit for heating circuit 3 (with mixer)	Check extension kit connections and code.



Fault code displayed	Const.	Weather- comp.	System characteristics	Cause	Measures
bC		X	Control mode without remote control	Communication error, Vitotrol remote control, heating circuit 1 (without mixer)	Check connections, cable, coding address "A0" in the "Heating circuit" group and remote control settings (see page 105). With wireless remote controls: check radio path connections; place wireless remote control and wireless repeater close to the boiler. Check KM-BUS connection to wireless base station. Replace the wireless components.
bd		X	Control mode without remote control	Communication error, Vitotrol remote control, heating circuit 2 (with mixer)	Check connections, cable, coding address "A0" in the "Heating circuit" group and remote control settings (see page 105). With wireless remote controls: check radio path connections; place wireless remote control and wireless repeater close to the boiler. Check KM-BUS connection to wireless base station. Replace the wireless components.
bE		X	Control mode without remote control	Communication error, Vitotrol remote control, heating circuit 3 (with mixer)	Check connections, cable, coding address "A0" in the "Heating circuit" group and remote control settings (see page 105). With wireless remote controls: check radio path connections; place wireless remote control and wireless repeater close to the boiler. Check KM-BUS connection to wireless base station. Replace the wireless components.
bF		X	Control mode	Incorrect LON communication module	Replace LON communication module.
C1	Х	X	Control mode	Communication er- ror, EA1 extension	Check the connections.
C2	Х	X	Control mode	Communication error, solar control module or Vitosolic	Check solar control mod- ule or Vitosolic.
C3	Х	X	Control mode	Communication er- ror, AM1 extension	Check the connections.
C4	X	X	Control mode	Communication error, OpenTherm extension	Check OpenTherm extension.

Fault code displayed	Const.	Weather- comp.	System characteristics	Cause	Measures
Cd	X	X	Control mode	Communication error, Vitocom 100, type GSM	Check connections, Vito- com 100 and coding ad- dress "95" in group "Gen- eral"/1 .
CF		X	Control mode	Communication error, LON communication module	Replace LON communication module.
d6	X	Х	Control mode	Input DE1 at EA1 extension reports a fault.	Remedy fault at affected appliance.
d7	Х	X	Control mode	Input DE2 at EA1 extension reports a fault.	Remedy fault at affected appliance.
d8	X	X	Control mode	Input DE3 at EA1 extension reports a fault.	Remedy fault at affected appliance.
dA		Х	Control mode without room influence	Short circuit, room temperature sensor, heating circuit 1 (without mixer)	Check room temperature sensor, heating circuit 1.
db		X	Control mode without room influence	Short circuit, room temperature sensor, heating circuit 2 (with mixer)	Check room temperature sensor, heating circuit 2.
dC		Х	Control mode without room influence	Short circuit, room temperature sensor, heating circuit 3 (with mixer)	Check room temperature sensor, heating circuit 3.
dd		Х	Control mode without room influence	Lead break, room temperature sen- sor, heating circuit 1 (without mixer)	Check room temperature sensor, heating circuit 1 and remote control set- tings (see page 105)
dE		X	Control mode without room influence	Lead break, room temperature sen- sor, heating circuit 2 (with mixer)	Check room temperature sensor, heating circuit 2 and remote control set- tings (see page 105)
dF		X	Control mode without room influence	Lead break, room temperature sen- sor, heating circuit 3 (with mixer)	Check room temperature sensor, heating circuit 3 and remote control set- tings (see page 105)
E0		X	Control mode	External LON sub- scriber error	Check connections and LON subscribers.
E1	X	X	Burner in a fault state	Ionisation current too high during cal- ibration	Check gap between ionisation electrode and burner gauze assembly (see page 39). In open flue operation, prevent high levels of dust in the combustion air. Press reset button R .



Fault code displayed	Const.	Weather- comp.	System characteristics	Cause	Measures
E2	Х	X	Burner in a fault state	Heating water flow rate too low during calibration. Flow switch has shut down.	Ensure adequate circulation volume. Check flow switch. Remove scaling and blockages. Press reset button R .
E3	X	X	Burner in a fault state	Heat transfer too low during calibra- tion Temperature limiter has shut down.	Ensure adequate heat transfer. Press reset button R .
E4	X	X	Burner blocked	24 V power supply fault	Replace control unit.
E5	X	Х	Burner blocked	Flame amplifier fault	Replace control unit.
E6	X	Х	Burner blocked	System pressure too low	Top up with water.
E7	X	X	Burner in a fault state	Ionisation current too low during cali- bration	Check ionisation electrode: Distance to burner gauze assembly (see page 39) Electrode contaminated Connecting cable and plug-in connections Check flue system; remove flue gas recirculation if required. Press reset button R .
E8	X	X	Burner in a fault state	lonisation current lies outside the permissible range	Check gas supply (gas pressure and gas flow switch), gas train and connecting cable. Check assignment of gas type (see page 32). Check ionisation electrode: Distance to burner gauze assembly (see page 39) Electrode contaminated Press reset button R.

Fault code displayed	Const.	Weather- comp.	System characteristics	Cause	Measures
EA	X	X	Burner in a fault state	Ionisation current not within permissi- ble range during calibration (exces- sive deviation from previous level)	Check flue system; remove flue gas recirculation if required. In open flue operation, prevent high levels of dust in the combustion air. Press reset button R . Following several unsuccessful reset attempts, replace the coding card and press reset button R .
Eb	X	X	Burner in a fault state	Repeated flame loss during calibra- tion	Check gap between ionisation electrode and burner gauze assembly (see page 39). Check assignment of gas type (see page 32). Check flue system; remove flue gas recirculation if required. Press reset button R .
EC	Х	Х	Burner in a fault state	Parameter error during calibration	Press reset button R . or Replace coding card and then press reset button R .
Ed	Х	X	Burner in a fault state	Internal fault	Replace control unit.
EE	X	X	Burner in a fault state	Flame signal at burner start not present or insuffi- cient.	Check gas supply (gas pressure and gas flow switch). Check gas train. Check ionisation electrode and connecting cable. Check ignition:
					 Connecting cables to ignition module and ignition electrode Ignition electrode gap and contamination (see page 39). Check condensate drain. Press reset button R.



Fault code displayed	Const.	Weather- comp.	System characteristics	Cause	Measures
EF	X	X	Burner in a fault state	Flame is lost immediately after it has built (during safety time).	Check gas supply (gas pressure and gas flow switch). Check balanced flue system for flue gas recirculation.
					Check ionisation electrode (replace if required): Distance to burner gauze assembly (see page 39) Electrode contaminated
					Press reset button R.
F0	Х	Х	Burner blocked	Internal fault	Replace control unit.
F1	Х	X	Burner in a fault state	Flue gas temperature has exceeded limit.	Check heating system fill level. Vent the system. Press reset button R after flue system has cooled down.
F2	X	X	Burner in a fault state	Temperature limiter has responded.	Check heating system fill level. Check circulation pump. Vent the system. Check temperature limiter and connecting cables. Press reset button R .
F3	X	X	Burner in a fault state	Flame signal is already present at burner start.	Check ionisation electrode and connecting cable. Press reset button R .
F6	Х	X	Burner in a fault state	Temperature values of the boiler water temperature sensors vary too widely from one another.	Replace the boiler water temperature sensors.
F8	Х	X	Burner in a fault state	Fuel valve closes too late.	Check gas train. Check both control paths. Press reset button R .
F9	X	Х	Burner in a fault state	Fan speed too low during burner start	Check the fan, fan con- necting cables, fan power supply and fan control. Press reset button R .
FA	X	X	Burner in a fault state	Fan idle state not reached	Check the fan, fan connecting cables and fan control. Press reset button R .
FC	X	X	Burner in a fault state	Gas train faulty, modulation valve control faulty or flue gas path blocked	Check gas train. Check flue system. Press reset button R .

Fault code displayed	Const.	Weather- comp.	System characteristics	Cause	Measures
Fd	Х	Х	Burner in a fault state and additional fault b7 is displayed.	Coding card missing.	Insert coding card. Press reset button R . Replace control unit if fault persists.
Fd	X	X	Burner in a fault state	Burner control unit fault	Check ignition electrodes and connecting cables. Check whether a strong interference (EMC) field exists near the appliance. Press reset button R . Replace control unit if fault persists.
FE	X	Х	Burner blocked or in a fault state	Coding card or main PCB faulty, or incorrect coding card	Press reset button R . If the fault persists, check the coding card and replace coding card or control unit.
FF	Х	Х	Burner blocked or in a fault state	Internal fault or reset button R blocked.	Restart the appliance. Replace the control unit if the appliance will not restart.

Faults without fault display

Fault	Cause of fault	Action		
Burner blocked and 3 is	Flow rate is insufficient	Check circulation pump and flow switch; re-		
displayed in code 38.	Circulation pump or flow switch faulty	place if necessary		
	Heat exchanger blocked	Flush and clean heat exchanger.		

Maintenance

Checking the outside temperature sensor (weather-compensated control units)

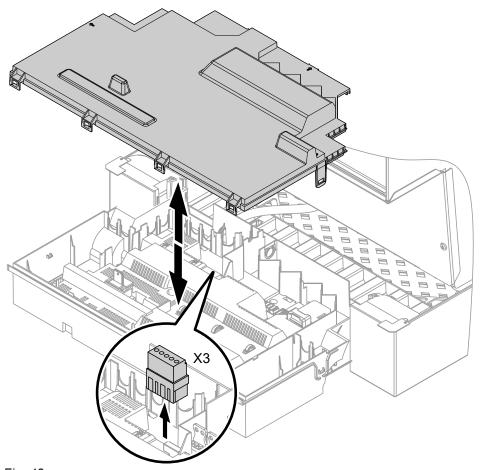


Fig. 43

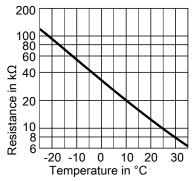


Fig. 44 Sensor type: NTC 10 $k\Omega$

- 1. Disconnect plug "X3" from the control unit.
- **2.** Test the resistance of the outside temperature sensor across terminals "X3.1" and "X3.2" on the disconnected plug and compare it with the curve.
- **3.** In the event of severe deviation from the curve, disconnect the wires at the sensor and repeat the test on the sensor itself.
- **4.** Depending on the result, replace the lead or the outside temperature sensor.

Maintenance (cont.)

Checking the boiler water temperature sensors, cylinder temperature sensor or flow temperature sensor for the low loss header

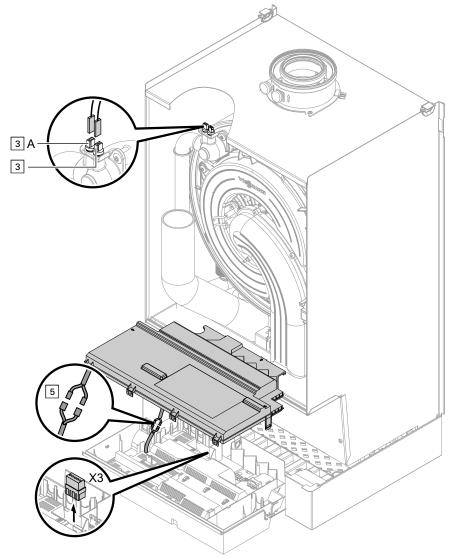


Fig. 45

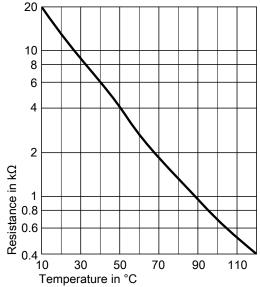


Fig. 46 Sensor type: NTC 10 kΩ

- Boiler water temperature sensor 1
 Disconnect the leads from boiler water temperature sensor 3 and check the resistance.
 - Boiler water temperature sensor 2
 Disconnect the leads from boiler water temperature sensor ③ A and check the resistance.
 - Cylinder temperature sensor
 Disconnect plug 5 from the cable harness at the control unit and check the resistance.
 - Flow temperature sensor
 Disconnect plug "X3" at the control unit and check the resistance across terminals "X3.4" and "X3.5".
- 2. Check the sensor resistance and compare it with the curve.



Maintenance (cont.)

3. In the event of severe deviation replace the sensor.



The boiler water temperature sensor is directly immersed in the heating water (risk of scalding).

Drain the boiler before replacing the sensor.

Checking the flue gas temperature sensor

The flue gas temperature sensor locks out the boiler if the permissible flue gas temperature is exceeded. Cancel the interlock after the flue system has cooled down by pressing reset button R.


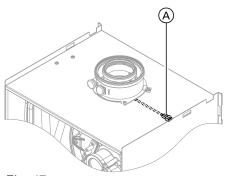


Fig. 47

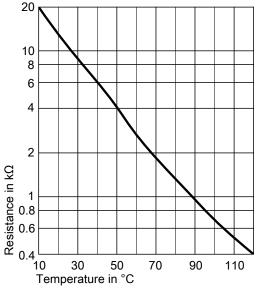

Sensor type: NTC 10 $k\Omega$

Fault during commissioning (fault A3)

During commissioning, the control unit checks for correct placement of the flue gas temperature sensor. If commissioning is terminated and fault message A3 is displayed:

1. Check whether the flue gas temperature sensor is correctly inserted. See previous diagram.

1. Disconnect leads from flue gas temperature sensor (A).

- 2. Check sensor resistance and compare it to the curve.
- 3. In the event of severe deviation replace the sensor.

- 2. If necessary, correct the position of the flue gas temperature sensor or replace the faulty flue gas temperature sensor.
- 3. Press reset button **R** and repeat commissioning. The check is repeated until it is completed successfully.

Maintenance (cont.)

Checking the fuse

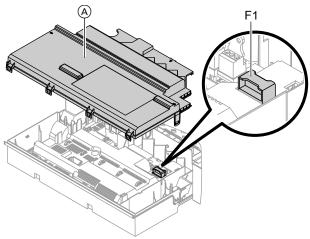


Fig. 49

1. Switch OFF the power supply.

- 2. Release the side closures and pivot the control unit down.
- 3. Remove cover (A).
- **4.** Check fuse F1 (see connection and wiring diagram).



Danger

Incorrect or improperly fitted fuses can lead to an increased risk of fire.

- Insert fuses without using any force. Position fuses correctly.
- Only use structurally identical types with the specified response characteristics.

Mixer extension kit

Checking the setting of rotary selector S1

The rotary selector on the PCB of the extension kit defines the assignment to the relevant heating circuit.

Heating circuit	Rotar settin	y selector S1 g
Heating circuit with mixer M2 (heating circuit 2)	2	0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0
Heating circuit with mixer M3 (heating circuit 3)	4	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\

Checking the rotational direction of the mixer motor

After being switched on, the boiler implements a selftest. During this, the mixer is opened and closed again.

Note

The mixer motor can also be started via the actuator test (see chapter "Checking outputs").

Observe the rotational direction of the mixer motor during its self-test.

 
Then manually set the mixer back to "Open".

The flow temperature sensor must now capture a higher temperature. If the temperature drops, either the motor is turning in the wrong direction or the mixer insert is incorrectly fitted.



Mixer installation instructions

Changing the rotational direction of the mixer motor (if required)



1. Remove the upper casing cover of the extension kit.



Danger

An electric shock can be life-threatening. Before opening the boiler, disconnect it from the mains voltage, e.g. at the fuse or mains isolator.

- 2. At plug 52, swap the cores at terminals "▲" and "▼".
- **3.** Refit the casing cover.

Check flow temperature sensor

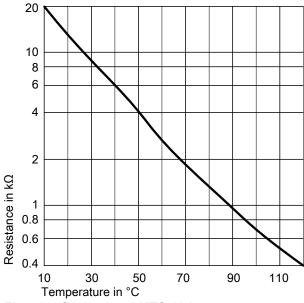


Fig. 51 Sensor type: NTC 10 $k\Omega$

- 1. Disconnect plug 2 (flow temperature sensor).
- **2.** Check the sensor resistance and compare it to the curve.

In the event of severe deviation replace the sensor.

Checking the Vitotronic 200-H (accessories)

The Vitotronic 200-H is connected to the control unit via the LON. To test the connection, carry out a subscriber check at the boiler control unit (see page 46).

Replacing the power cable

When replacing the power cable, only use the power cable available as a spare part from Viessmann.

Constant temperature control unit

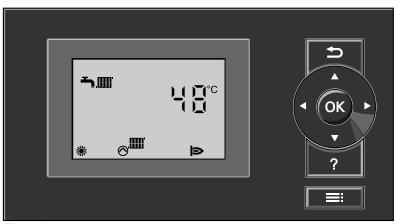


Fig. 52

Heating mode

The selected set boiler water temperature will be maintained when a demand is being raised by the room thermostat and the heating program is set to DHW and central heating "——]".

The boiler water temperature will be maintained at the default frost protection temperature when there is no demand.

The electronic temperature limiter inside the burner control unit limits the boiler water temperature. Flow temperature setting range: 20 to 74 °C.

DHW heating

The burner and the circulation pump for cylinder heating are started if the DHW temperature lies 2.5 K below the set DHW temperature.

In the delivered condition, the set boiler water temperature is 20 K higher than the set DHW temperature (adjustable via coding address "60"). If the actual DHW temperature exceeds the set DHW temperature by 2.5 K, the burner is switched off and the circulation pump run-on time begins.

Weather-compensated control unit

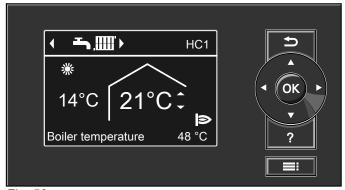


Fig. 53

Weather-compensated control unit (cont.)

Heating mode

The control unit determines a set boiler water temperature subject to outside temperature or room temperature (if a room temperature-dependent remote control is connected) and to the slope/level of the heating curve.

The determined set boiler water temperature is transferred to the burner control unit. From the set and actual boiler water temperatures, the burner control unit calculates the modulation level and regulates the burner accordingly.

The electronic temperature limiter inside the burner control unit limits the boiler water temperature.

DHW heating

The burner and the circulation pump for cylinder heating are started if the DHW temperature lies 2.5 K below the set DHW temperature.

In the delivered condition, the set boiler water temperature is 20 K higher than the set DHW temperature (adjustable via coding address "60"). If the actual DHW temperature exceeds the set DHW temperature by 2.5 K, the burner is switched off and the circulation pump run-on time begins.

Boosting DHW heating

This function is activated by specifying a second set DHW temperature via parameter/coding address 58 in the "DHW" group and activating the fourth DHW time phase for DHW heating.

Heating is boosted during the periods selected in this time phase.

Internal extensions (accessories)

Internal H1 extension

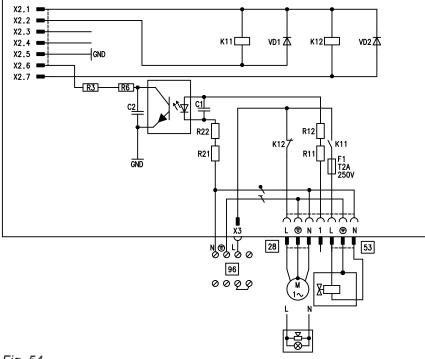


Fig. 54

Internal extensions (accessories) (cont.)

The internal extension is integrated into the control unit enclosure. The following alternative functions can be connected to relay output 28. The function is assigned via parameter/coding address "53" in the **"General"** group:

- Central fault message (parameter/code "53:0")
- DHW circulation pump (parameter/code "53:1") (only for weather-compensated operation)
 Connect DHW circulation pumps with standalone functions directly to the 230 V ~ supply.
- Heating circuit pump for heating circuit without mixer (parameter/code "53:2")
- Circulation pump for cylinder heating (parameter/ code "53:3")

An external safety valve can be linked to connection [53].

Internal H2 extension

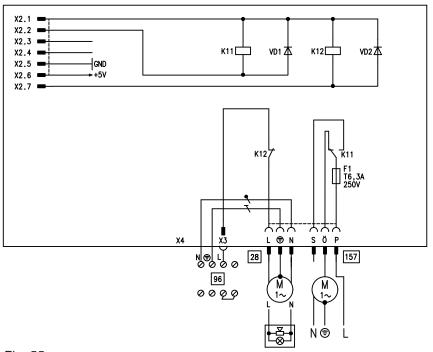


Fig. 55

The internal extension is integrated into the control unit enclosure. The following alternative functions can be connected to relay output [28]. The function is assigned via parameter/coding address "53" in the **"General"** group:

- Central fault message (parameter/code "53:0")
- DHW circulation pump (parameter/code "53:1") (only for weather-compensated operation)
 Connect DHW circulation pumps with standalone functions directly to the 230 V ~ supply.
- Heating circuit pump for heating circuit without mixer (parameter/code "53:2")
- Circulation pump for cylinder heating (parameter/ code "53:3")

An extractor fan can be switched off via connection when the burner starts.

External extensions (accessories)

AM1 extension

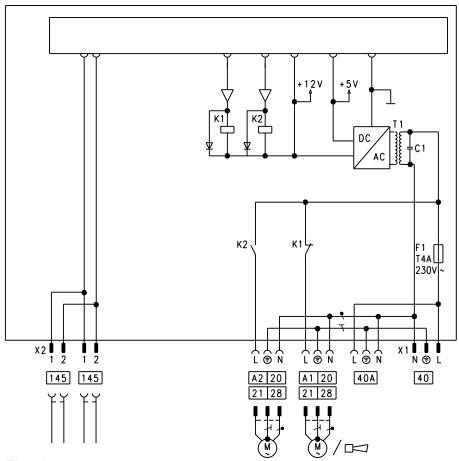


Fig. 56

A1 Circulation pump

A2 Circulation pump

Power supply

40 A Power supply for additional accessories 145 KM-BUS

Functions

One of the following circulation pumps can be connected to each of connections A1 and A2:

- Heating circuit pump for heating circuit without mixer
- Circulation pump for cylinder heating
- DHW circulation pump (only for weather-compensated control units)

Connect DHW circulation pumps with standalone functions directly to the 230 V \sim supply.

Select the output functions via parameter changes/codes at the boiler control unit.

Function assignment

Function assignment Function	Parameter/code ("General" group)		
	Output A1	Output A2	
DHW circulation pump 28	33:0	34:0 (delivered condition)	
Heating circuit pump 20	33:1 (delivered condition)	34:1	
Circulation pump for cylinder heating 21	33:2	34:2	

External extensions (accessories) (cont.)

EA1 extension

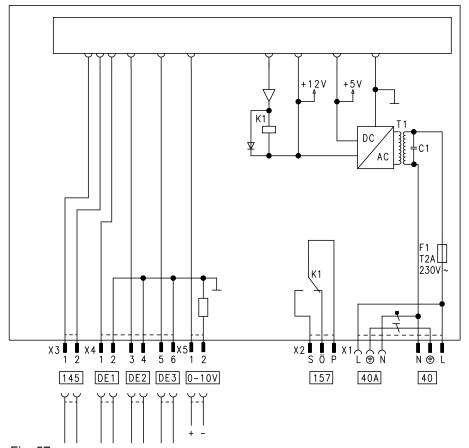


Fig. 57

F1	Fuse
DE1	Digital input 1
DE2	Digital input 2
DE3	Digital input 3
0-10 V	0 - 10 V input
40	Power supply

40 A Power supply for additional accessories

Central fault message/feed pump/DHW

Central fault message/feed pump/DHW circulation pump (potential-free)
Connect DHW circulation pumps with standalone functions directly to the 230 V ~ supply.

145 KM-BUS

Digital data inputs DE1 to DE3

The following functions can alternatively be connected:

- External operating program changeover for each heating circuit
- External blocking
- External blocking with fault message input
- External demand with minimum boiler water temperature
- Fault message input
- Brief operation of the DHW circulation pump

External contacts must be floating. When connecting external contacts, observe the requirements of protection class II: 8.0 mm air and creep path or 2.0 mm insulation thickness to live parts.

Input function assignment

Select the input functions via the parameter changes/codes in the **"General"** group at the boiler control unit:

- DE1: Parameter/coding address 3A
- DE2: Parameter/coding address 3b
- DE3: Parameter/coding address 3C

Assigning the operating program changeover function to the heating circuits

Select the operating program changeover function for the relevant heating circuit via parameter/coding address d8 in the "Heating circuit" group at the boiler control unit:

- Changeover via input DE1: Parameter/code d8:1
- Changeover via input DE2: Parameter/code d8:2
- Changeover via input DE3: Parameter/code d8:3

Function description

External extensions (accessories) (cont.)

The effect of the operating program changeover is selected via parameter/coding address d5 in the **"Heating circuit"** group.

The duration of the changeover is set via parameter/coding address F2 in the **"Heating circuit"** group.

Effect of external blocking function on the pumps

The effect on the internal circulation pump is selected via parameter/coding address 3E in the **"General"** group.

The effect on the relevant heating circuit pump is selected via parameter/coding address d6 in the "Heating circuit" group.

The effect on a circulation pump for cylinder heating is selected via parameter/coding address 5E in the "DHW" group.

Effect of the external demand function on the pumps

The effect on the internal circulation pump is selected via parameter/coding address 3F in the **"General"** group.

The effect on the relevant heating circuit pump is selected via parameter/coding address d7 in the "Heating circuit" group.

The effect on a circulation pump for cylinder heating is selected via parameter/coding address 5F in the "DHW" group.

DHW circulation pump runtime for brief operation

The DHW circulation pump is started by closing the contact at DE1, DE2 or DE3 by means of a pushbutton. The runtime is set via parameter/coding address "3d" in the **"General"** group.

Analogue input 0 - 10 V

The 0 – 10 V hook-up provides an additional set boiler water temperature:

0 – 1 V is taken as "No specification for set boiler water temperature".

Ensure galvanic separation between the earth conductor and the negative pole of the on-site power source.

Output 157

The following functions can be connected to output [157]:

- Feed pump to substation or
- DHW circulation pump or
- Fault message facility

Information regarding the feed pump

Function only possible in conjunction with a heating circuit control unit connected via LON.

Information on DHW circulation pumps

Connect DHW circulation pumps with standalone functions directly to the 230 V \sim supply.

Function assignment

Select the function of output 157 via coding address "36" in the **"General"** group at the boiler control unit.

Control functions

External operating program changeover

The "External operating program changeover" function is implemented via the EA1 extension. There are 3 inputs available at the EA1 extension (DE1 to DE3).

The function is selected via the following coding addresses in the **"General"** group:

Heating program changeover	Code
Input DE1	3A:1
Input DE2	3b:1
Input DE3	3C:1

Select the operating program changeover function for the respective heating circuit via coding address "d8" in the **"Heating circuit"** group at the boiler control unit:

Heating program changeover	Code
Changeover via input DE1	d8:1
Changeover via input DE2	d8:2
Changeover via input DE3	d8:3

You can select the direction of the operating program changeover in coding address "d5" in the **"Heating circuit"** group:

Heating program changeover	Code
Changeover towards "Constantly reduced" or "Constant standby mode" (subject to the selected set value)	d5:0
Changeover towards "Constant heating mode"	d5:1

The duration of the operating program changeover is set in coding address "F2" in the **"Heating circuit"** group:

Heating program changeover	Code
No operating program changeover	F2:0
Duration of the operating program changeover 1 to 12 hours	F2:1 to F2:12

The operating program changeover stays enabled for as long as the contact remains closed, but at least as long as the duration selected in coding address "F2".

External blocking

The functions "External blocking" and "External blocking with fault message input" are implemented via the EA1 extension. There are 3 inputs available at the EA1 extension (DE1 to DE3).

The function is selected via the following coding addresses in the **"General"** group:

External blocking	Code
Input DE1	3A:3
Input DE2	3b:3
Input DE3	3C:3

External blocking and fault message input	Code
Input DE1	3A:4
Input DE2	3b:4
Input DE3	3C:4

The effect on the internal circulation pump is selected in coding address "3E" in the **"General"** group.

The effect on the relevant heating circuit pump is selected in coding address "d6" in the **"Heating circuit"** group.

External demand

The "External demand" function is implemented via the EA1 extension. There are 3 inputs available at the EA1 extension (DE1 to DE3).

The function is selected via the following coding addresses in the **"General"** group:

Function description

Control functions (cont.)

External demand	Code
Input DE1	3A:2
Input DE2	3b:2
Input DE3	3C:2

The effect on the internal circulation pump is selected in coding address "3F" in the "General" group. The effect on the relevant heating circuit pump is selected in coding address "d7" in the "Heating circuit" group.

The set minimum boiler water temperature for external demand is selected in coding address "9b" in the "General" group.

Venting program

During the venting program, the circulation pump will be alternately switched on and off for 30 s over a period of 20 min.

The burner is switched off during the venting program. Activating the venting program: See "Venting the heating system".

Screed drying

When activating screed drying, observe the information provided by the screed manufacturer.

When screed drying is activated, the heating circuit pump for the heating circuit with mixer starts and the flow temperature is maintained in accordance with the selected profile. On completion (30 days), the heating circuit with mixer is controlled automatically according to the set parameters.

Observe EN 1264. The report to be provided by the heating contractor must contain the following heat-up details:

Heat-up data with respective flow temperatures

- Max. flow temperature achieved
- Operating state and outside temperature during handover

Various temperature profiles can be set via coding address "F1" in the **"Heating circuit"** group. The function continues after a power failure or after the control unit has been switched off. "Heating and DHW" is started when screed drying is finished or if code "F1:0" is set manually.

Temperature profile 1: (EN 1264-4) code "F1:1"

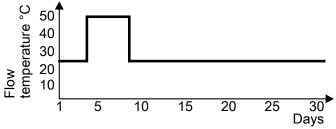


Fig. 58

Temperature profile 2: (ZV parquet and flooring technology) code "F1:2"

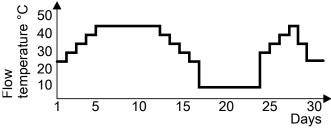


Fig. 59

Temperature profile 3: Code "F1:3"

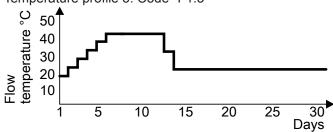


Fig. 60

Temperature profile 4: Code "F1:4"

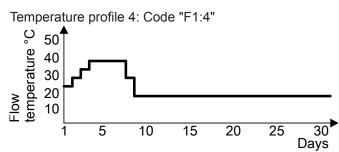


Fig. 61

Temperature profile 5: Code "F1:5"

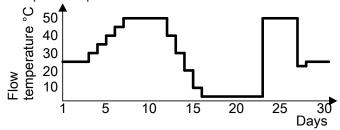


Fig. 62

Temperature profile 6: Code "F1:6"

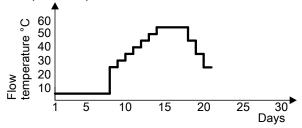


Fig. 63

Temperature profile 7: Code "F1:15"

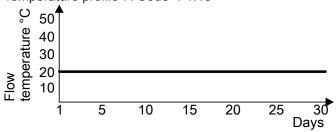


Fig. 64

Raising the reduced room temperature

During operation with reduced room temperature, the reduced set room temperature can be automatically raised subject to the outside temperature. The temperature is raised in accordance with the selected heating curve, but no higher than the set standard room temperature.

The outside temperature limits for the start and end of temperature raising can be set in coding addresses "F8" and "F9" in the "Heating circuit" group.

Example using the settings in the delivered condition

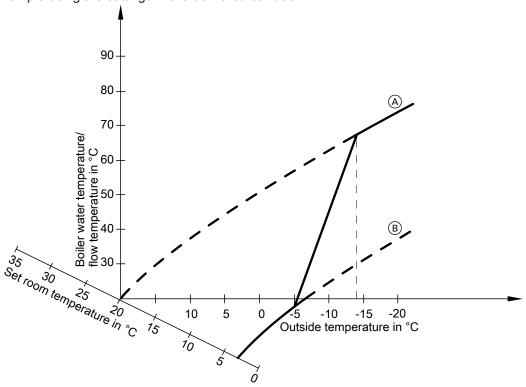


Fig. 65

- A Heating curve for operation with standard room temperature
- B Heating curve for operation with reduced room temperature

Reducing the heat-up time

During the transition from operation with reduced room temperature to operation with standard room temperature, the boiler water or flow temperature will be raised in accordance with the selected heating curve. The boiler water or flow temperature can be automatically increased.

The value and duration for the additional raising of the set boiler water temperature or set flow temperature can be set in coding addresses "FA" and "Fb" in the "Heating circuit" group.

Example using the settings in the delivered condition

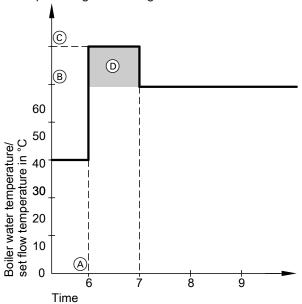


Fig. 66

- A Start of operation with standard room temperature
- B Set boiler water or flow temperature in accordance with the selected heating curve
- © Set boiler water or flow temperature in accordance with coding address "FA": 50 °C + 20 % = 60 °C
- Duration of operation with raised set boiler water or flow temperature in accordance with coding address "Fb":
 60 min

Assigning heating circuits to the remote control

The assignment of heating circuits must be configured during remote control commissioning.

Remote control affects the following heating circuit	Configuration		
	Vitotrol 200A	Vitotrol 300A	
	Vitotrol 200 RF	Vitotrol 300 RF	
Heating circuit without mixer A1	H 1	Heating circuit 1	
Heating circuit with mixer M2	H 2	Heating circuit 2	
Heating circuit with mixer M3	H 3	Heating circuit 3	

Note

One heating circuit can be assigned to the Vitotrol 200A and 200 RF.

Up to three heating circuits can be assigned to the Vitotrol 300A and 300 RF.

A maximum of 2 hardwired remote control units **or** 3 wireless remote controls may be connected to the control unit.

If the assignment of a heating circuit is later cancelled, reset coding address "A0" in the **"Heating circuit"** group for this heating circuit to 0 (fault message bC, bd, bE).

Function description

Electronic combustion control unit

The electronic combustion controller utilises the physical correlation between the level of the ionisation current and the air ratio λ . The maximum ionisation current is achieved at an air ratio of 1 for all gas qualities. The ionisation signal is evaluated by the combustion controller and the air ratio is adjusted to a value between λ =1.24 and 1.44. This range provides for an optimum combustion quality. Thereafter, the electronic gas valve regulates the required gas volume subject to the prevailing gas quality.

To check the combustion quality, the CO_2 content or the O_2 content of the flue gas is measured. The prevailing air ratio is determined with the measured values. The relationship between the CO_2 or O_2 content and air ratio λ is illustrated in the following table.

Air ratio λ- CO₂/O₂ content

Air ratio λ	O ₂ content (%)	CO ₂ content (%) for	CO ₂ content (%) for	CO ₂ content (%) for
		natural gas E	natural gas LL	LPG P
1.20	3.8	9.6	9.2	11.3
1.24	4.4	9.2	9.1	10.9
1.27	4.9	9.0	8.9	10.6
1.30	5.3	8.7	8.6	10.3
1.34	5.7	8.5	8.4	10.0
1.37	6.1	8.3	8.2	9.8
1.40	6.5	8.1	8.0	9.6
1.44	6.9	7.8	7.7	9.3
1.48	7.3	7.6	7.5	9.0

To achieve an optimum combustion control, the system regularly carries out an automatic self-calibration; also after a power failure (shutdown). For this, the combustion is briefly regulated to max. ionisation current (corresponding to air ratio λ =1). Automatic calibration is carried out shortly after the burner start and lasts approx. 5 s. During calibration, higher than normal CO emissions may occur briefly.

Internal connections


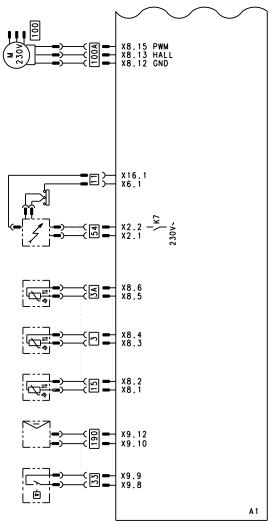


Fig. 67

- Main PCB Α1
- X... Electrical interfaces
- 3 3 A Boiler water temperature sensor Boiler water temperature sensor
- 11 Ionisation electrode
- Flue gas temperature sensor

- Flow switch Ignition unit 54
- Fan motor 100
- 100 A Fan motor control
- 190 Modulation coil

External connections

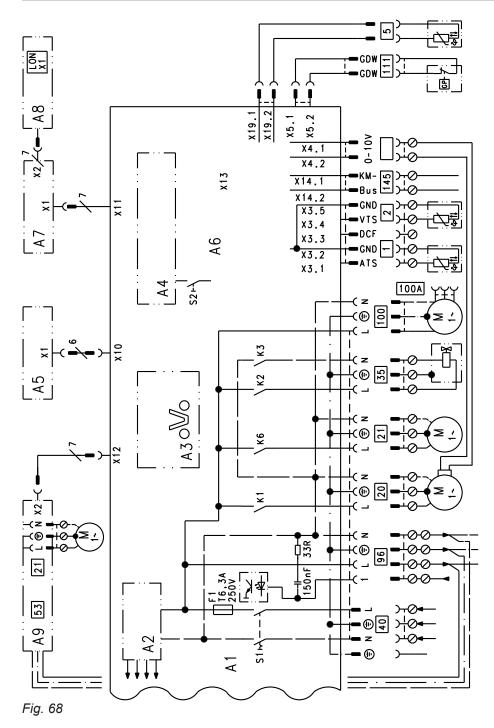

- A1 Main PCB
- A2 Switching mode power supply
- A3 Optolink
- A4 Burner control unit
- A5 Programming unit
- A6 Coding card
- A7 Connection adaptor
- A8 LON communication module or cascade communication module
- A9 Internal extension (accessories)
- S1 ON/OFF switch
- S2 Reset button
- X... Electrical interfaces
- 1 Outside temperature sensor

- 2 Flow temperature sensor, low loss header
- 5 Cylinder temperature sensor (plug on the cable harness)
- 20 Heating circuit pump or boiler circuit pump
- 21 Circulation pump, either:
 - DHW circulation pump
 - External heating circuit pump
 - Circulation pump for cylinder heating
- 35 Gas solenoid valve
- 40 Power supply
- 96 Power supply for accessories and Vitotrol 100
- 100 Fan motor
- 111 Gas pressure switch
- 145 KM-BUS

Appendix

Report

Settings and test values		Set value	Commission-ing	Maintenance/ service	Maintenance service
Date					
Signature					
Static pressure	mbar kPa	≤ 57.5 ≤ 5.75			
Supply pressure (flow pressure)					
For natural gas	mbar kPa	See table "Supply			
For LPG	mbar kPa	pressure" (Commis- sioning)			
☐ Enter gas type					
Carbon dioxide content CO ₂ For natural gas					
At lower heating output	% by vol.	See "Check- ing the com-			
 At upper heating output 	% by vol.	bustion qual- ity" (Com-			
For LPG		mission-			
 At lower heating output 	% by vol.	ing)			
 At upper heating output 	% by vol.				
Oxygen content O ₂					
 At lower heating output 	% by vol.				
 At upper heating output 	% by vol.				
Carbon monoxide content					
At lower heating output	ppm	< 1000			
 At upper heating output 	ppm	< 1000			

Specification

Gas	boiler.	category	2N3D
-	~~,	outogo: y	" 2N3P

Rated heating output range *2			
T _F /T _R 50/30 °C (Pcond(50/30))	kW	12 (17) - 49	12 (17) - 60
$T_F/T_R = 80/60 ^{\circ}\text{C} (\text{Pn}(80/60))$	kW	10.9 (15.5) - 45.0	10.9 (15.5) - 55.2
Rated heating input range (Qn)	kW	11.2 (16.1) - 45.7	11.2 (16.1) - 56.2
Rated voltage	V	230	
Rated frequency	Hz	50	
Rated current	A	6	
Backup fuse (power supply)	Α	16	
Power consumption in the delivered condition	W	66	122
Electronic temperature limiter setting (TN) (fixed)	°C	82	
Temperature limiter setting (fixed)	°C	100)
Permiss. operating pressure (PMS)	bar MPa	4 0.4	4 0.4
NO _X	Class	6	6
Connection values relative to max. load			
with	2 "	4.04	5.05
Natural gas E	m³/h	4.84	5.95
Natural gas LL	m ³ /h	5.62	6.91
LPG	kg/h	3.57	4.39
Flue gas values	/-	00	00
Mass flow rate (for DHW heating) Townseture (for DHW heating)	g/s °C	23	28
Temperature (for DHW heating)Max. temperature	°C	67 120	72 120
Permissible ambient temperature		120	120
During operation:	°C	0 to +40	∩ °C
During operation.During storage and transport:	°C	-20 to +6	
Protection class		20 10 10	
IP rating		IP X 4 to El	N 60529
Weight	kg	65	65
Product ID		CE-0085C	

Note

The connection values are only for reference (e.g. in the gas contract application) or for a rough supplementary check of the volumetric settings. Due to factory settings, the gas pressure must not be altered from these values. Reference: 15 °C, 1013 mbar (101.3 kPa).

Flue system types

Available in the following countries	Flue system types
AE, AM, AT, BA, BG, BY, CH, CY, CZ, DK, EE, ES, FI, GB, GR, HR, HU, IE, IS, IT, KG, KZ, LI, LT, LU, LV, MT, NL, NO, PL, PT, RO, RS, RU, SE, SK, TR, UA	$B_{23},B_{33},C_{13},C_{33},C_{43},C_{53},C_{63},C_{83},C_{93}$
BE	B ₂₃ , B _{23P} , B ₃₃ , C ₁₃ , C ₃₃ , C ₄₃ , C ₅₃ , C ₈₃ , C _{83P} , C ₉₃
DE, SI	B ₂₃ , B ₃₃ , C _{13X} , C _{33X} , C _{43X} , C _{53X} , C _{63X} , C _{83X} , C _{93X}
FR	B ₂₃ , B _{23P} , B ₃₃ , C ₁₃ , C ₃₃ , C ₄₃ , C ₅₃ , C ₆₃ , C ₈₃ , C _{83P} C ₉₃

 $^{^{\}star 2}$ Values in () when operating with LPG P

Specification (cont.)

Gas categories

Available in the following countries	Gas categories
AE, AT, AM, BA, BG, BY, CH, CZ, DK, EE, ES, FI, GB, GR, HR, IE, IS, IT, KG, KZ, LI, LT, LU, LV, MT, NO, PT, RO, RS, RU, SE, SI, SK, TR, UA	II_{2N3P}/II_{2H3P}
AM, BY, KG, KZ, RU, UA	I _{2N} /I _{2H}
BE, DE, FR	II_{2N3P}
CY	I _{3P}
FR, IT	I _{2HM}
HU	II_{2N3P}/II_{2HS3P}
NL	II _{2EK3P}
PL	II _{2N3P} /II _{2ELw3P}

Final decommissioning and disposal

Viessmann products can be recycled. Components and substances from the system are not part of ordinary household waste.

For decommissioning the system, isolate the system from the power supply and allow components to cool down where appropriate.

All components must be disposed of correctly.

Declaration of conformity

We, Viessmann Werke GmbH & Co. KG, D-35107 Allendorf, declare as sole responsible body that the named product complies with the European directives and supplementary national requirements in terms of its design and operational characteristics.

Using the serial number, the full Declaration of Conformity can be found on the following website: www.viessmann.co.uk/eu-conformity

Manufacturer's declaration

This product meets the requirements of the Efficiency Directive (92/42/EEC) for condensing boilers.

Manufacturer's certificate according to the 1st BlmSchV [Germany]

We, Viessmann Werke GmbH & Co. KG, D-35107 Allendorf, confirm that the product **Vitodens 200-W** complies with the NO_x limits specified by the 1st BlmSchV, paragraph 6 [Germany].

Allendorf, 01 February 2018

Viessmann Werke GmbH & Co. KG

Authorised signatory Reiner Jansen Head of Strategic Quality Management

Keyword index

A		Gas type	32
Acknowledging a fault display	80	Gas type conversion	
В		Н	
Back draught safety device		Heating circuit assignment	
Boiler, opening		Heating curve	
Boiler water temperature sensor		Heating curve level	
Boosting DHW heating		Heating curve slope	
Brief scans		Heating output, setting	
Burner gauze assembly		Heat-up time	104
Burner installation			
Burner removal	37	1	
_		Ignition	
C		Ignition electrodes	
Code 1		Ionisation electrode	39
- Calling up	48		
Code 2		L	
– Calling up		Language selection	
Codes for commissioning		LON	
Combustion chamber cleaning		- Fault monitoring	
Combustion controller		- Subscriber check	
Commissioning		- Subscriber number setting	
Condensate drain		LON communication module	45
Converting the gas type			
Cylinder temperature sensor	91	M	440
_		Manufacturer's certificate	
D	0.0	Mixer open/closed	93
Date, setting			
Diaphragm expansion vessel	41		7.5
-		Operating conditions, calling up	
Electronic combustion controller	400	Operating data, calling up	
Electronic combustion controller	106	Operating program changeover	
Extension	00	Outside temperature sensor	90
– AM1 – EA1		D	
		R	104
- Internal H2		Raising reduced room temperature	
- Internal H2		Reduced set room temperature	
Extension kit for heating circuit with mixer		Reducing heat-up output	
External blocking External demand		Reducing heat-up time	
External demand	101	Relay test	
E		Remote control	
Fault codes	01	Removing a fault display	
		Rotational direction, mixer motor	109
Fault historyFault manager		- Changing	ດວ
Fault memory		- Checking	
Fault message call-up		- Griecking	90
Faults		S	
Faults without fault display		Screed drying	102
Fill water		Screed drying function	
Flow pressure		Service level call-up	
Flue gas temperature sensor		Service never call-up	
Function description		Set room temperature selection	
Function description		Specification	
Fuse		Standard set room temperature	
1 436	90	Static pressure	
G		Supply pressure	
Gas supply pressure	21	System, filling	
Gas train		System pressure	
Oas (I all I	34	System schemes	
		Oyaleiii adileiilea	+0, 40

Keyword index (cont.)

Т	W
Tightness test, balanced flue system36	Wiring diagram107
Time, setting30	
Trap31, 40	
V	
Venting	
Venting program102	
Vitotronic 200-H	





Viessmann Werke GmbH & Co. KG D-35107 Allendorf Telephone: +49 6452 70-0 Fax: +49 6452 70-2780 www.viessmann.com Viessmann Limited
Hortonwood 30, Telford
Shropshire, TF1 7YP, GB
Telephone: +44 1952 675000
Fax: +44 1952 675040
E-mail: info-uk@viessmann.com